



USER MANUAL Marine Display



DMWX1050/51/52/53/54/55 - 12" IP-65 Marine Monitor
DMWX1100/01/02/03/04 - 15" IP-65 Marine Monitor
DMWX1150/51/52/53/54 - 17" IP-65 Marine Monitor
DMWX1200/01/02/03/04/05 - 19" IP-65 Marine Monitor
DMWX1250/51/52/53/54 - 21.5" IP-65 Marine Monitor
DMWX1302/03/04/04-1/05 - 24" IP-65 Marine Monitor

(Version 24.06.2015)

All information is subject to change without notice.

RECORD OF REVISION

Version and Date	Description	Remark
Jun. 24 2015	Initial Release	

TABLE OF CONTENT

RECORD OF REVISION	2
TABLE OF CONTENT	3
1.0 INTRODUCTION.....	8
2.0 CONTROL AND FEATURES.....	9
3.0 INSTALLATIONS	10
4.0 TOUCH DRIVER INSTALLATIONS.....	16
5.0 OSD OPERATIONS.....	36
6.0 TECHNICAL SPECIFICATION.....	52
7.0 MAINTENAINCE AND TROUBLESHOOTING.....	70

IMPORTANT INFORMATION

EMC conformance

All equipment and accessories are designed to the best industry standards for use in the recreational marine environment. The design and manufacture of the equipment and accessories conform to the appropriate ElectroMagnetic Compatibility (EMC) standards, but correct installation is required to ensure that performance is not compromised.

Waste Electrical and Electronic Equipment Directive



The Waste Electrical and Electronic Equipment (WEEE) Directive requires the recycling of waste electrical and electronic equipment. Whilst the WEEE Directive does not apply to some of the products, we support its policy and ask you to be aware of how to dispose of this product.

The crossed out wheeled bin symbol, illustrated above, and found on our products signifies that this product should not be disposed of in general waste or landfill. Please contact your local dealer, national distributor or Technical Services for information on product disposal.

Restriction of the use of certain Hazardous Substances



This product uses components that comply with the requirements of the Restriction of the use of certain Hazardous Substances (RoHS) Directive 2002/95/ EC.

Packing List

Before installation, please ensure the following items have been shipped:

- 1 x Marine Display
- 4 x Mounting bracket lugs and 4 stainless steel threaded studs
- 1 x Power Cable (5000 mm)
- 1 x VGA Cable (3000 mm)
- 1 x CD for User Manual and Touch Driver
- 1 x Printed Flush Mount Template
- 1 x Printed User Manual
- 1 x AC/DC Adaptor for model
DMWX1050-55/1100-03
DMWX1150-54/1200-03/1250-54/1302-03

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.



Driver DVD



Ordering Information

Model Number & Description

DMWX1051

12" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power

DMWX1052

12" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power,
with power adaptor

DMWX1050

12" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power

DMWX1053

12" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power,
with power adaptor

DMWX1053

12" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power
with power adaptor

DMWX1055

12" Sunlight readable LCD, Optical bonding Multi-touch, 9-36V DC wide range input power

DMWX1101

15" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power

DMWX1102

15" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power,
with power adaptor

DMWX1100

15" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power

DMWX1103

15" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power,
with power adaptor

Tbd.

15" Sunlight readable LCD, Optical bonding Multi-touch, 9-36V DC wide range input power

DMWX1151

17" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power

DMWX1152

17" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power,
with power adaptor

DMWX1150

17" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power

DMWX1153

17" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power,
with power adaptor

Tbd.

17" Sunlight readable LCD, Optical bonding Multi-touch, 9-36V DC wide range input power

DMWX1201

19" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power

DMWX1202

19" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power,
with power adaptor

DMWX1200

19" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power

DMWX1203

19" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power,
with power adaptor

Tbd.

19" Sunlight readable LCD, Optical bonding Multi-touch, 9-36V DC wide range input power

DMWX1251

21.5" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power

DMWX1252

21.5" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power,
with power adaptor

DMWX1250

21.5" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power

DMWX1253

21.5" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power,
with power adaptor

DMWX1254

21.5" Sunlight readable LCD, Optical bonding Multi-touch, 9-36V DC wide range input power

Tbd.

21.5" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power,
with power adaptor

DMWX1302

24" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power

DMWX1304

24" Sunlight readable LCD, Optical bonding AR glass, 9-36V DC wide range input power,
with power adaptor

DMWX1303

24" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power

DMWX1305

24" Sunlight readable LCD, Optical bonding SR touch, 9-36V DC wide range input power,
with power adaptor

Tbd.

24" Sunlight readable LCD, Optical bonding Multi-touch, 9-36V DC wide range input power

Optional Accessories

VGA Cable 3000mm. D-SUB15P TO D-SUB 15P
Power Cable, DC, 5000mm, TERMINAL TO OPEN, 14AWG*2C

1.0 INTRODUCTION

About Marine Display

The Marine Display, the high-performance, equipped with optical bonding AR glass or sunlight readable touch monitor, is specially engineered to survive the most demanding applications. You will soon become familiar with the quality difference in this bright sunlight readable (0.5 to 1,000 nits) monitor.

The range of Sunlight Viewable Marine Displays has been developed to be used as part of an integrated marine navigation system or within an entertainment system. The displays, available in several sizes, are designed to be waterproof and suitable for use above or below decks.


The Marine Display Series sunlight readable monitor handles a wide-range of extreme environments making it the industry choice for mobile applications. Housed in a milled billet aluminum case, the slim-profile Marine Display Series is light weight and watertight. Front-mounted controls and the touch screen make the industrial rugged monitor user-friendly. We have incorporated the latest optical engineering to achieve optimal viewability in all lighting conditions, including direct sunlight. The Marine Display's are power efficient, low heat design results in increased reliability and longevity required for mission critical deployment.

This handbook contains important information on the installation, operation and maintenance of the Sunlight Viewable Marine Display range which is intended for use in the recreational marine market and covers all models.

2.0 CONTROL AND FEATURES


Your Sunlight Viewable Marine Display has the following controls and features:

Front View

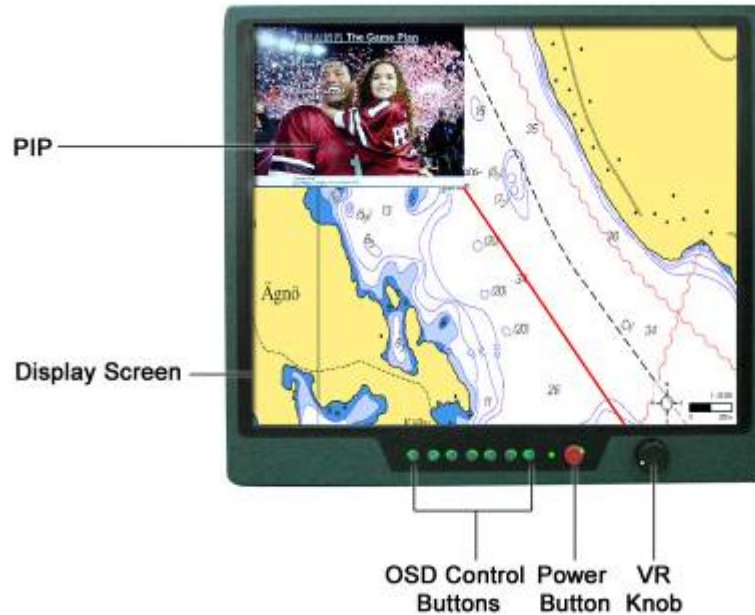

Remarks: The PIP function is only available for DMWX1050/51/52/53 / 54 / 55 DMWX1100/01/02/03 DMWX1150/51/52/53 DMWX1200/01/02/03 DMWX1250/51/52/53 DMWX1302/03/04/05 model

Back View

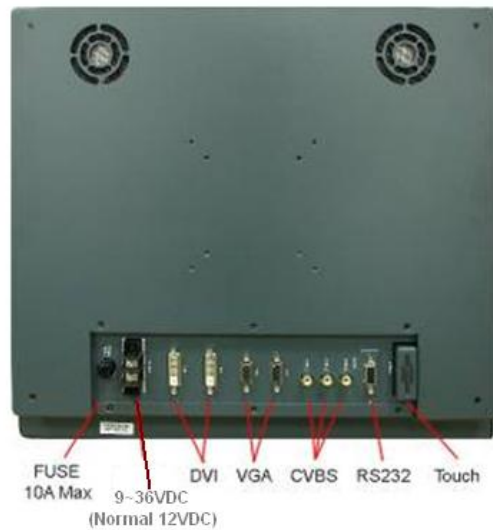

Remarks: Only DVIx1 and VGAx1 for DMWX1050/51/52/53 / 54 / 55 DMWX1100/01/02/03 model

3.0 INSTALLATIONS

It is important that your new display is installed and operated in accordance with the instructions provided in this handbook. Failure to do so could result in poor product performance and may invalidate your warranty.

When planning the installation the following points must be considered:

- Your Marine display is sunlight viewable and visible in direct sunlight..
- If temperatures exceed the normal temperature operating range the display could overheat and begin to blackout due to the limitations of TFT LCD technology.
- In order to minimize the chances of a malfunction, the following precautions should be taken during installation:
 - The display should be installed in an area where there is proper and adequate ventilation (min. 15cm clearance) . If it is possible to cool the area behind the display, it will significantly reduce the risk of a malfunction.
 - The display should be mounted at an angle to the sun. We do not recommend mounting the unit in a flat plane, which increases the surface area exposed to the sun and leads to increased heat absorption.

IMPORTANT: Your Marine display is only waterproof from the front. To maintain watertight integrity the display must be flush mounted ensuring that the rear casing is enclosed in a watertight enclosure.



The Marine Display Series is designed to be mounted in two configurations:

VESA75 / VESA100 MOUNT

The Marine Display Series is designed compatible with VESA75 and VESA100 mount. By installing the monitor with this kit, the user can adjust the viewing angle to improve viewability in changing environments. This mounting system has proven to be successful in supporting an extreme amount of weight in high vibration and difficult-mount applications.

The back of the monitor includes mounting points that you can use to mount the monitor as your installation requires.

Mounting holes on the Marine Display Series allow the monitor to be mounted by rear mounted using VESA75 or VESA100 mount

PANEL (Flush) MOUNT


For installation, there are four tapped mounting holes on the two sides of the unit's panel. The mounting hardware packet is included with the product accessories in the shipping box. This packet includes four (4) stainless steel threaded studs, 3.2 cm and four (4) mounting lock nuts.

Your monitor can be installed using the mounting lock nuts (supplied) in the vertical keyways. Make sure that both brackets are in the same orientation.



Preparing the installation site


1. Select an installation site that has sufficient space behind for cable connections and ventilation.
2. Tape the supplied flush mount template in the required position.
3. Using a jigsaw, carefully remove the shaded portion of the template.
4. Using a suitable file, smooth the edges of the aperture.

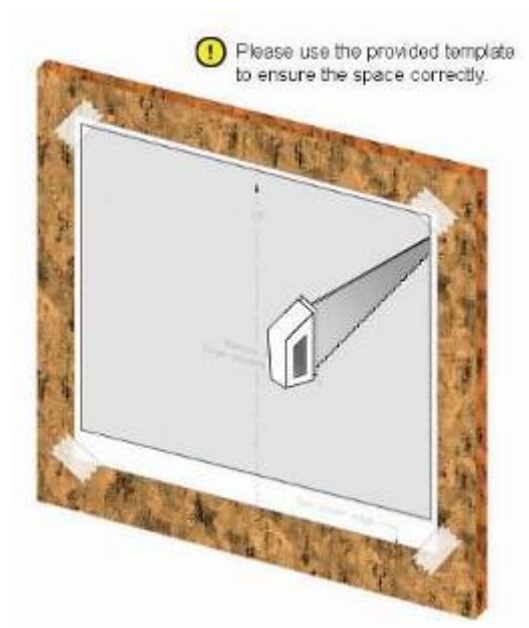

Installing the display

1. Carefully insert the monitor into the aperture, ensuring that the gasket on the rear of the fascia lays flat against the aperture edge.


IMPORTANT: The gasket must lay flat against the aperture edge to ensure watertight integrity.

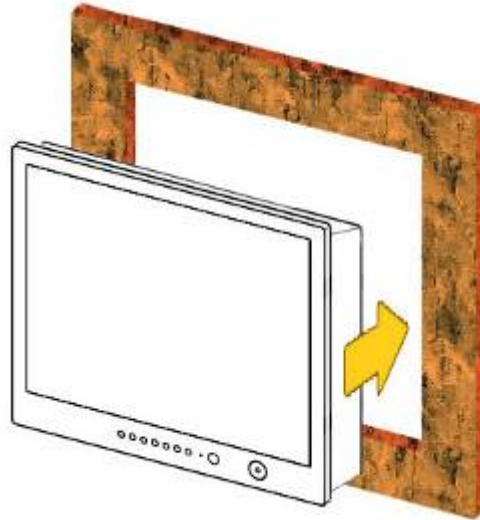

2. Place the mounting bracket lugs into the keyways and move them to the rear, securing the bracket to the monitor.


Note: The mounting brackets can be used in either the horizontal or vertical keyways as required.

3. Using a suitable screwdriver, tighten the mounting bracket screws to secure the monitor in position.

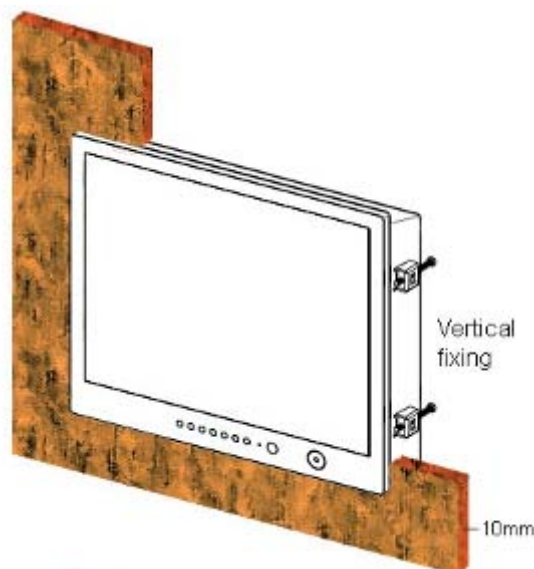

4. Connect all cables as required - see “Rear connections” below.

Rear connections

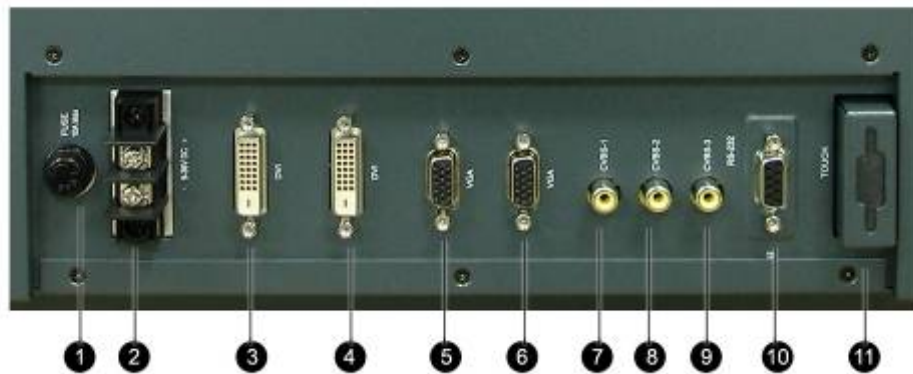

Remarks: The photo above will differ for different model

The rear connectors are:

1. FUSE
2. Power Input
3. DVI-1 Input
4. DVI-2 Input (N/A for DMWX1050/51/52/53/ 54 / 55 & DMWX1100/01/02/03)
5. VGA-1 Input
6. VGA-2 Input (N/A for DMWX1050/51/52/53/ 54 / 55 & DMWX1100/01/02/03)
7. CVBS-1 Input (Composite Video) for AV input
8. CVBS-2 Input (Composite Video) for AV input
9. CVBS-3 Input (Composite Video) for AV input
10. RS232 Input
11. USB for Touch control (option)

Planning the installation

Before you install your display, the following points should be considered:

- Power requirements.
- Display location and mounting options.
- Additional accessories, e.g. keyboard or speakers.

Power requirements

Your Sunlight Viewable display is designed to run on boat's power systems, with AC/DC adaptor Marine Display series are equipped with 9-36V DC wide range power input. For power connection please make sure the power cable is tightly connected by two screws of the terminal block.

The output pin of AC/DC adaptor should be checked and make sure the polarity of voltage is connected properly.

Grounding the display

It is important that an effective radio frequency (RF) ground is connected to the display. You must ground the display by connecting the drain wire (shield) of the power input cable to the nearest ground point of the boat's RF ground system.

Display location and mounting options

Your display can be mounted using the flush mounting kit supplied. The Marine Displays recommends that you power the unit and select a suitable mounting location prior to installing the display.

When planning the display location, the following points should be considered to ensure safe, comfortable and reliable operation:

- Convenience- the mounting location should be easily accessible to allow operation of the controls and should enable easy viewing of the display.

Power connections

The power connection to the display should be made at either the output of the battery isolator switch, or at a DC power distribution panel. Marine Display recommends that power is fed directly to the display via its own dedicated cable system and **MUST** be protected by a thermal circuit breaker or fuse, fitted close to the power connection. If you do not have a thermal circuit breaker or fuse in your power circuit, you **MUST** fit an in-line breaker or fuse to the positive (red) lead of the power cable.



- Installation angle- the display should be mounted at an angle. Mounting it in a flat plane is not recommended due to increased heat absorption.
- Viewing angle - this LCD has been chosen to give the very best performance, including viewing angle. However, the contrast and colors seen on all LCD displays vary slightly with viewing angle.
- Environment - to prevent overheating, do not restrict airflow at the rear of the display unit; If the space behind the display is air conditioned or cooled by a fan, it will help in keeping the unit's temperature down when mounted in direct sunlight.

FAILURE TO ADEQUATELY VENTILATE THE UNIT COULD INVALIDATE YOUR WARRANTY.

The display should be protected from physical damage and excessive vibration. Although the display unit is waterproof from the front when installed correctly, it is good practice to mount it in a protected area away from prolonged and direct exposure to rain and salt spray. **DO NOT** place the display near to a heat source.

Typical Installation Diagram



Remarks: The real installation diagram above is only for reference and will differ for different kind of customer's applications

4.0 TOUCH DRIVER INSTALLATIONS

Both AR glass and Resistive touch screen solutions are used for our products. If you have a customized or tailored product, please check the specifications in this manual or provide us your third-party specifications.

Resistive Touch Screen

It generally uses a display overlay composed of layers, each with a conductive coating on the interior surface. Special separator “dots” are distributed evenly across the active area and separate the conductive interior layers. The pressure from using either a mechanical stylus or finger produces an internal electrical contact at the “action point” which supplies the controller with vertical and horizontal analog voltages for data input. The resistive touch screens are anti-glare to reduce reflective shine intensity, which will slightly diffuse the light output throughout the screen. Resistive technology activation can be initiated by; a gloved hand, fingernail, mechanical stylus or an ungloved finger.

Resistive Touch - Brief Specifications

Subject	Details
Input Method	Finger & Stylus Finger & Stylus Touch Stylus Touch Stylus Gloved Hand
Touch Activation Force	0.10 - 0.80N (10 - 80g)
Insulation Resistance	$\geq 20M\Omega/25V(DC)$
Light Transmission	> 80%
Operating Temperature	-10 °C ~ +70 °C
Storage Temperature	-40 °C ~ +80 °C
Humidity (Operating)	20%RH ~ 80%RH
Surface Hardness	$\geq 3H$
Durability	35,000,000 times

This touch panel controller provides the optimistic performance of analog resistive touch panels for 4 wire, 5 wire and 8 wire models. It communicates with PC system directly through RS232, PS/2 or USB connector. Users can see how superior the design is in sensitivity, accuracy and friendly operation. The touch panel driver emulates mouse left and right button function and supports operation systems including Microsoft Windows 95 / 98 / ME /NT4 / 2000 / XP / XP Tablet PC Edition, Windows CE 2.12 / 3.0 / .NET, Linux, iMac and DOS.

Installing Software

TouchKit is software, which contains drivers of the touch panel controllers for the specified communication connectors, RS232, PS/2 and USB, and the other two utilities:

- Touch Tray support


This is utility for emulating the right and left button of mouse through controlling touch panel. Users can toggle between right or left mouse buttons by this utility.

- Configuration support



The calibration and draw test of touch panel are done by this utility. Besides, users can add or remove for new RS-232, PS/2 or USB touch panel devices.

Follow these steps to install TouchKit.

1. Put the TouchKit CD to CD-ROM.
2. Change directory to Win9X_ME
3. Double click the Setup.exe, then windows starts to run the installation program.
Notice that do not plug the USB controller on the system before the installation has been finished.
4. Just click [Next >] button to continue installation.

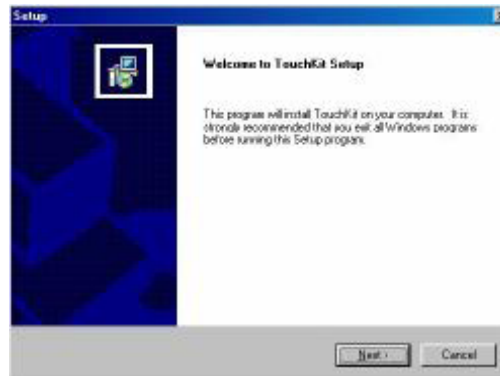


5. Then check the check box if PS/2 touch controller is to be installed. The default is unchecked. Then Press [Next >] to continue installation.

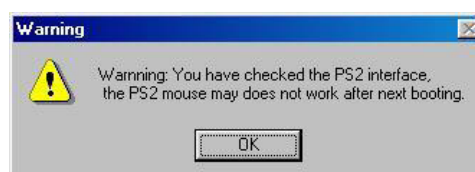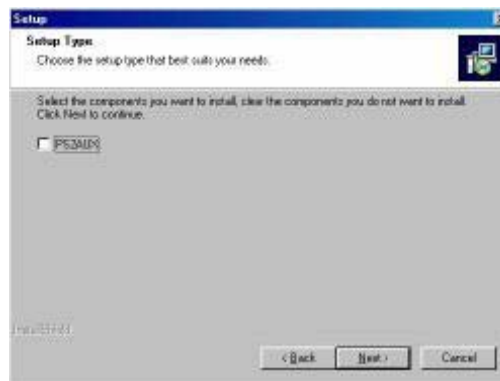


System will give you a warning, if users check the PS2AUX check box,


6. Choose the setup type that best suits your needs. There are two TouchKit accessory utilities for choosing, Rotation Monitor Utility and Shutdown Utility. Users can install the utility they want by checking the box. Then Press [Next >] to continue installation.

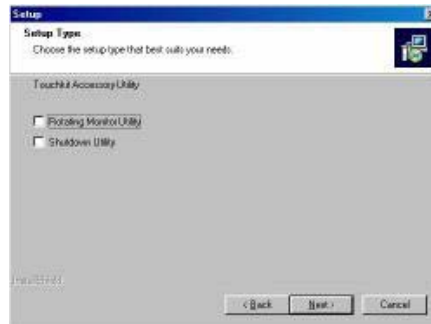

7. Select the appropriate folder where set-up files will be installed. Then Press [Next >] to continue installation.

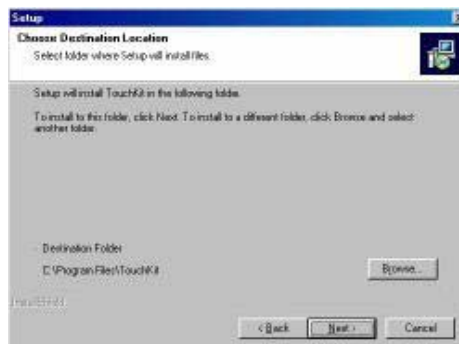

8. Then type in the name of program folder for TouchKit or press [Next >] to continue. There will be a default name for it.

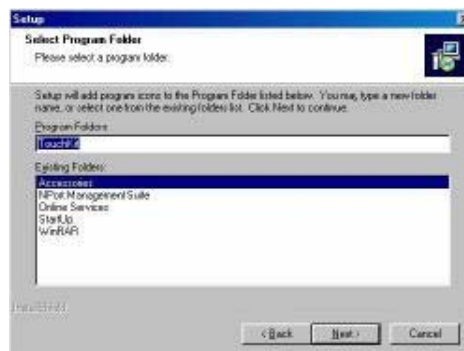

During driver installation, the setup program will scan COM port for RS232 Touchkit controller. Once the controller was scanned, the setup program will display a dialog as




Click Yes to add the controller on the specified COM port automatically.

9. Windows is copying files to disk and the setup is complete. It will request re-boot computer. Press [Yes >] to re-boot immediately or [No >] to re-boot later. The installation will not be finished until system re-boot.




10. Setup is complete. After TouchKit installation, the USB device will be found automatically as soon as it was plugged into the computer. Then users can see the new device on the application program window. And, the program will remove the USB Device automatically as soon as it was unplugged. (USB device is not supported for Windows95)

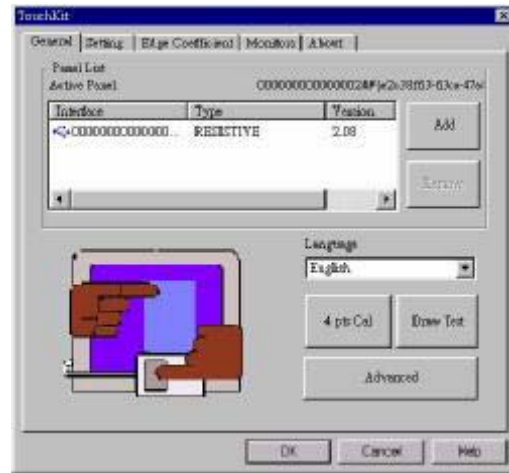


Configuration Utility and Right Button Emulator

There are five property pages in TouchKit utility, and they are General, Setting, Edge coefficient, Monitors and About. Each property page contains different functions for users to do the adjustments. Therefore, users can easily manage all the TouchKit controllers through TouchKit utility.

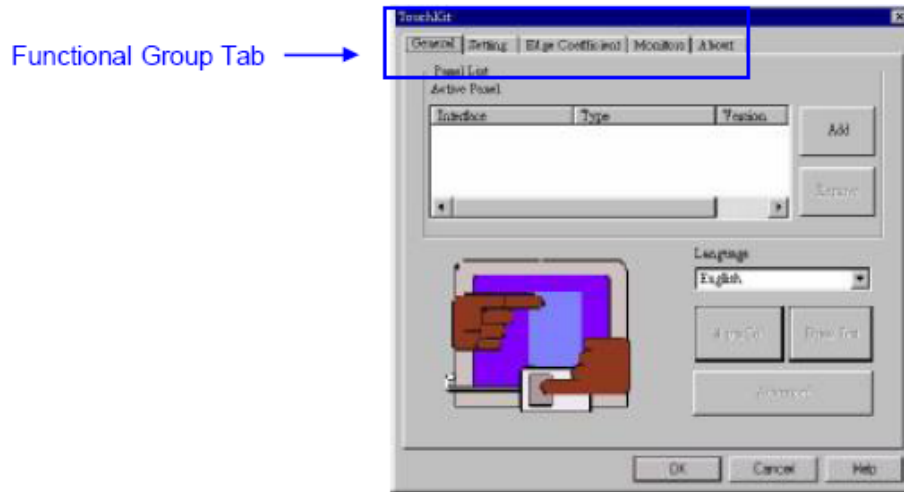


General

General property page contains the functions of language selection, devices add/remove, 4 points calibration, Draw test and Advanced.

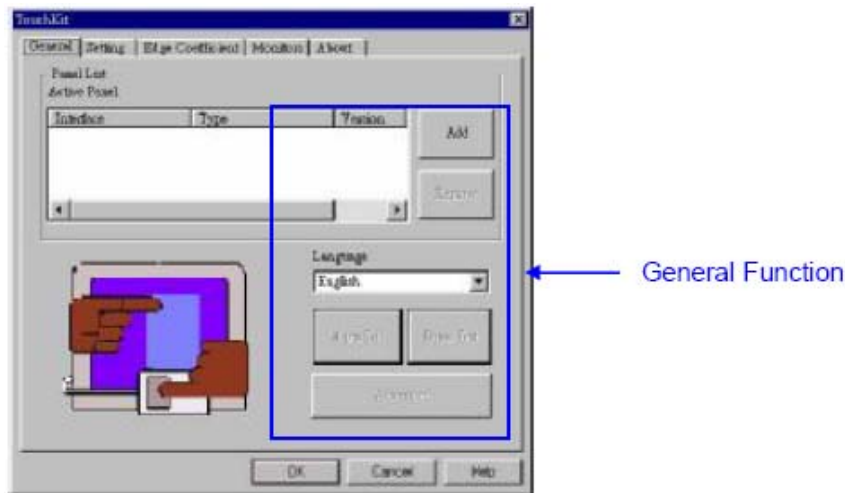

<Language>

TouchKit supports multi-language user interface. Users could select native language that is compatible to operation system support. For example, if the operation system is a traditional Chinese version, users could see the normal display words under the traditional Chinese and English mode. There are ten different languages, English, Traditional Chinese, Simplified Chinese, French, Spanish, German, Japanese, Italian, Korean and Dutch supported in this feature of TouchKit.

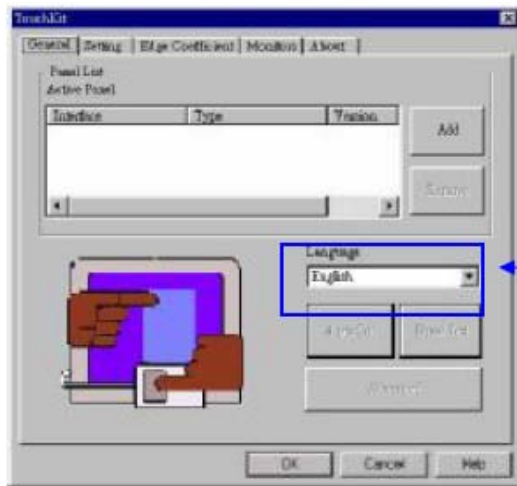


Note to select the compatible language first.


Select the compatible language first or users may not see the normal display of each button.

<Add> / <Remove>

Please check the touch panel devices (including its controller) are equipped well, then click [Add] button to add all of those RS-232 and PS/2 devices to the Panel List dialogue box.

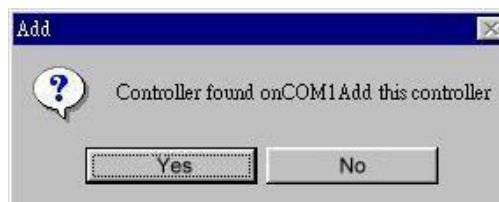


There is one devices found. Press [Yes] to continue.

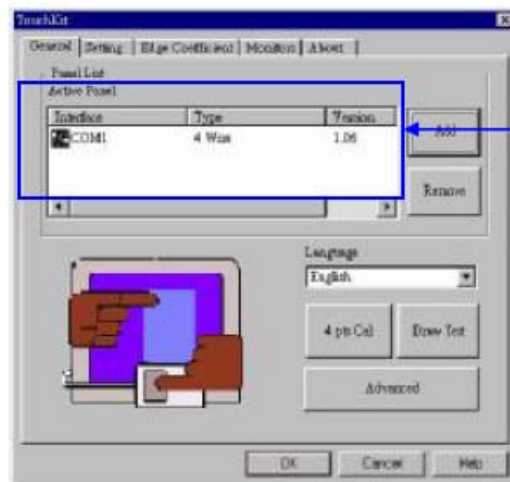


Device is found in COM1

The controller is displayed on the Panel List box. Users can get the information of interface, type, firmware version and baud rate for each controller. Select one device after added more than one device at the panel list window. The one selected will activate the panel, and remember to do the calibration before starting to use touch panel.

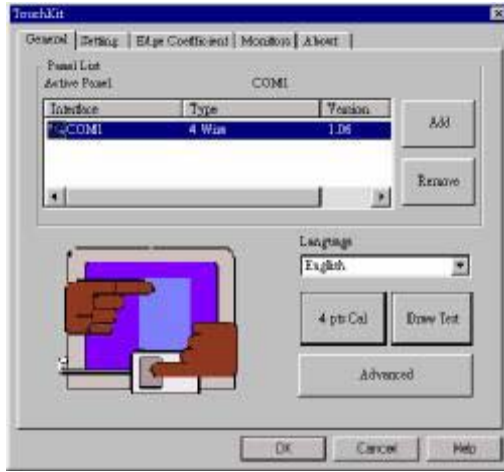

But, for hot-swapping USB touch controller, it will be added automatically as soon as it was plugged into the computer. Then users can see the new device on the application program window. And, the program will remove the USB touch controller automatically as soon as it was unplugged. (USB device is not supported for Windows95)

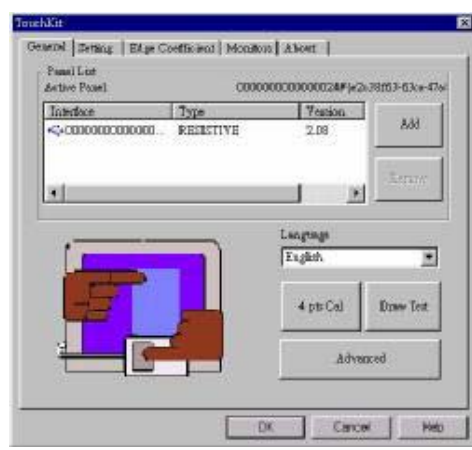

There are three buttons, [4pts Cal] [Draw Test] [Advanced], at the lower section of the General property page.

<4pts Cal>


Correct 4 point locations on screen with the panel. Press [4 pts Cal], screen displays as follows.



Touch the blinking symbol on panel until beep or stop blinking.

<Draw Test>


Test the drawing position related to the display screen on panel.
Click on the [Draw Test] button. There will be a squared blue display showing.

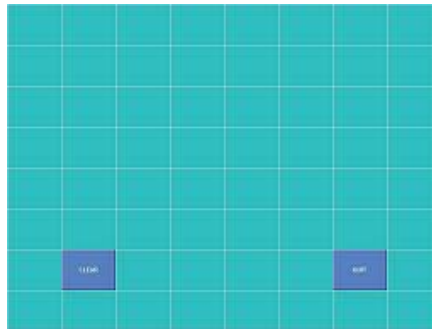


In drawing test window, users can click [Clear] button to clear the window. Also, users can click [Quit] or press mouse right button to quit from the drawing test. In drawing test window, users can verify the panel linearity, calibration capability, and drawing line quality.

<Advanced>

Touchkit provide more accuracy 25 points calibration for touch sensor. In addition, Touchkit provides controller setting for capacitive touch sensor. If the capacitive controller is selected, a capacitive setting property page appears on the advanced sheet. In general case, it does not need to do 25 points calibration other then bad linearity sensor.

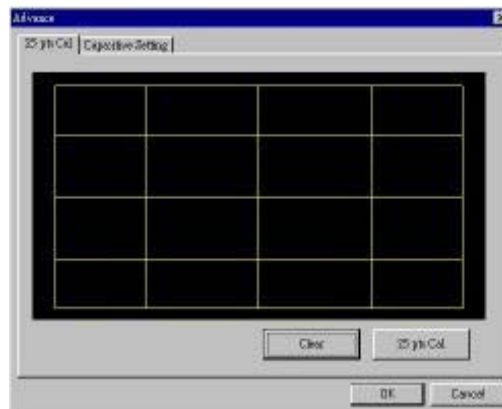

Press [Clear] to clear the previous calibration records.

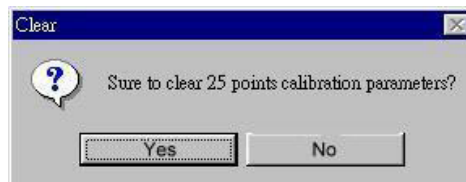

Press [Yes] to clear previous records. The record will become default record.

Press [25ptCal] to do 25 points calibration. Correct 25 point locations on screen with the panel.



Touch the blinking symbol on panel until beep or stop blinking.
After the calibration, the new record will overwrite the old one.

If the selected controller is capacitive type, an extra property page for capacitive setting adjustment shown as below:



Please select property size of capacitive screen first, and press [Restart]




The capacitive controller will restart, and do not touch the screen before the warning message disappears

Warning: Do not adjust the sensitive and sampling time without RD help

Setting

There are three functional groups in Setting property page, and at the upper section of the property page is sound option; at the middle section is Mouse Mode; and at the lower section is Double Click Adjustment.

The Sound options provide users the click feedback while touching the panel. Select preferred option first.

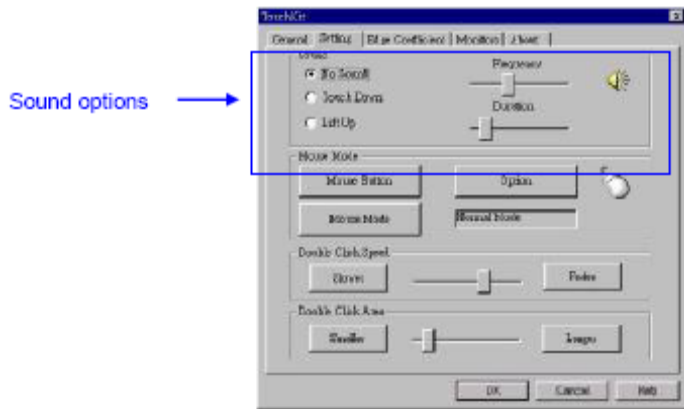

<No Sound>

Users could choose to make no sound while using the touch panel.

<Touch Down>

The system will make a sound while touching the panel.

<Lift Up>

The system will not make any sound until finger leaves the touch panel.


<Frequency>

Sound frequency, drag the cursor from left to right is low to high.

<Duration>

Sound duration, drag the cursor from left to right is short to long.

The Mouse Mode provides users different operating options. They are as follows:

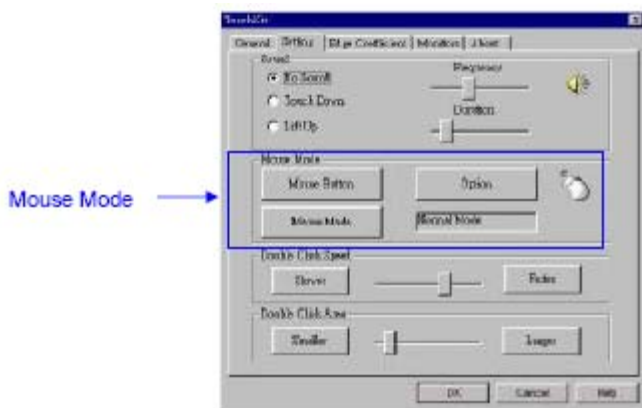


<Mouse Button>

Click it to show / hide Touch Tray on the right bottom corner of the desktop.

The touch panel system starts with the computer booting, and a mouse icon shows in the taskbar.


Users can choose show or hide Touch Tray from the mouse icon in the taskbar.

Just click the mouse icon to choose show or hide.

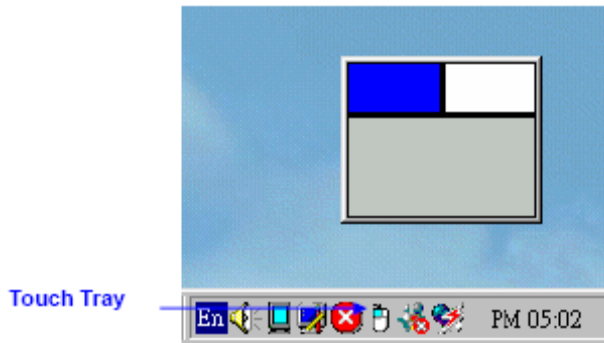


Change right / left button by clicking the upper small rectangular box of Touch Tray. Blue area expresses what button has been selected.

<Shutdown utility>

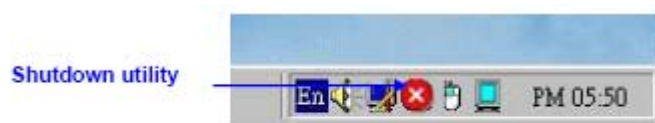

Click on shutdown utility in the task bar

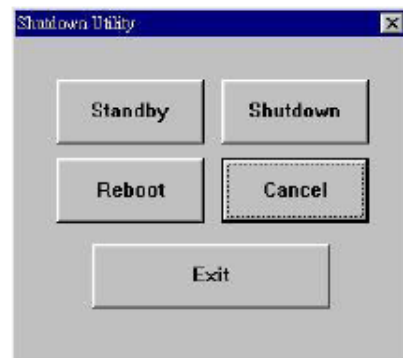

Shutdown utility dialog

There are five modes in shutdown utility for users convenience.
 [Standby] to enter standby mode that saves power consumption.
 [Shutdown] to turn off PC.
 [Reboot] to restart PC.
 [Cancel] to escape from the Shutdown utility dialog.
 [Exit] to disable the Shutdown utility.

Please notice that Windows NT does not support this function.

<Mouse Mode>

There are three kinds of mouse mode users could choose,
 [Normal Mode]
 It provides all the mouse functions, including the dragging function.

[Click on Touch]


Click action is executed as soon as users touch the panel.

[Click on Release]

Click action will not be executed until finger leaves the panel.

<Option>

Touchkit provides an option for advanced Mouse Emulation setting. When the Option button is pressed, a setting property sheet will be popped up. Support Constant Touch and Support Auto Right Button check boxes are shown in the property sheet to enable / disable Constant touch and Auto right button support.

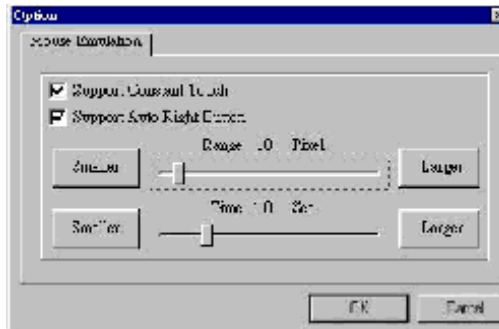

[Constant Touch]


Enable Constant Touch to force driver to stop reporting touch point when the movement is within the range which users can adjust. Therefore, the user can see a stabilized cursor instead of a chattering cursor when users touch the same point with unwanted noise.

[Auto Right Button]

Enable Auto Right Button to force driver to report a right click mouse event to OS when users do a continuing touch till time out. It no longer needs to touch the right button in the Touchtray to activate a right click. This feature makes users to do right click more easily with touchscreen.


<Cursor Visibility>

Cursor visibility function provides users to hide the cursor in the display. Please go to Start / Control Panel / Mouse / Pointers / Scheme, and choose TouchKit Hide Cursor. Press [Apply] to make setting change, and press [OK] to escape the property page.

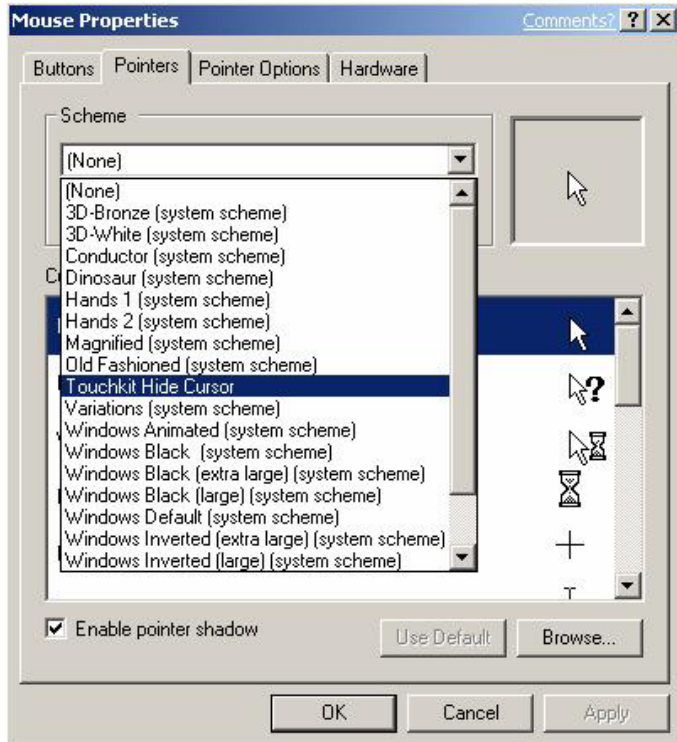

If users want to cancel the function of TouchKit Hide Cursor, do the steps again and choose the other scheme.

The Double Click adjustment provides users to set up the tolerance while double clicking. They are as follows:

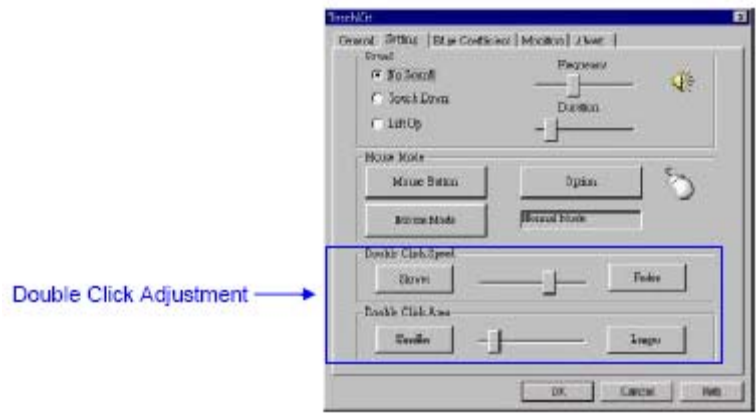


<Double Click Speed>
 Double Click Speed is the double click response time for Windows system. Users can adjust the proper double click for easy double click by touch panel.

<Double Click Area>
 Each one touch has its own touch tolerance once someone may not fix in one point. So if users set the Double Click Area to <Smaller>, the panel will be very sensitive about micro-move while users want to fix on a point. If users set it to <Larger>, it tolerates the larger touch point movement while users want to point at a fixed position.

Edge Coefficient
 Edge Coefficient property page contains the functions of Edge Compensation for

Top, Bottom, Left, Right, X Axis and Y Axis.

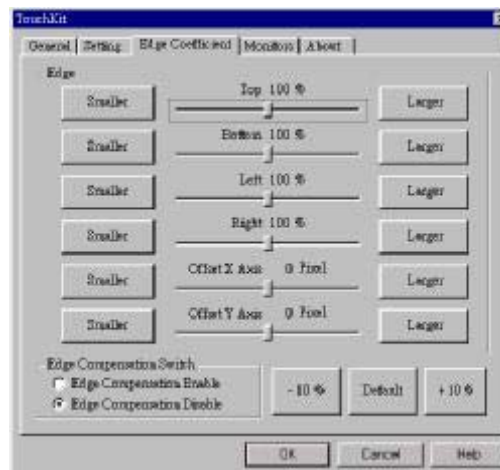

In some case, if it is difficult to touch items at the edges of the touch panel, users can set adjustment to reach the edges of the screen image.

<Top>

If users set the Edge to <Smaller>, TouchKit will reduce the horizontal position of the top edge. If users set the Edge to <Larger>, TouchKit will extend the horizontal position of the top edge.

<Bottom>

If users set the Edge to <Smaller>, TouchKit will reduce the horizontal position of the bottom edge. If users set the Edge to <Larger>, TouchKit will extend the horizontal position of the bottom edge.

<Left>

If users set the Edge to <Smaller>, TouchKit will reduce the vertical position of the left edge. If users set the Edge to <Larger>, TouchKit will extend the vertical position of the left edge.

<Right>

If users set the Edge to <Smaller>, TouchKit will reduce the vertical position of the right edge. If users set the Edge to <Larger>, TouchKit will extend the vertical position of the right edge.

In some case, cursor will be behind the finger when users touch the panel. If users can not see the cursor when they touch down on the panel, users can set X Axis or Y Axis to move the cursor.


<Offset X Axis>

If users set the Offset X Axis to <Smaller>, cursor will be moved a pixel of X Axis to left. If users set the Offset X Axis to <Larger>, cursor will be moved a pixel of X Axis to right.

<Offset Y Axis>

If users set the Offset Y Axis to <Smaller>, cursor will be moved a pixel of Y Axis to top. If users set the Offset Y Axis to <Larger>, cursor will be moved a

pixel of Y Axis to bottom.

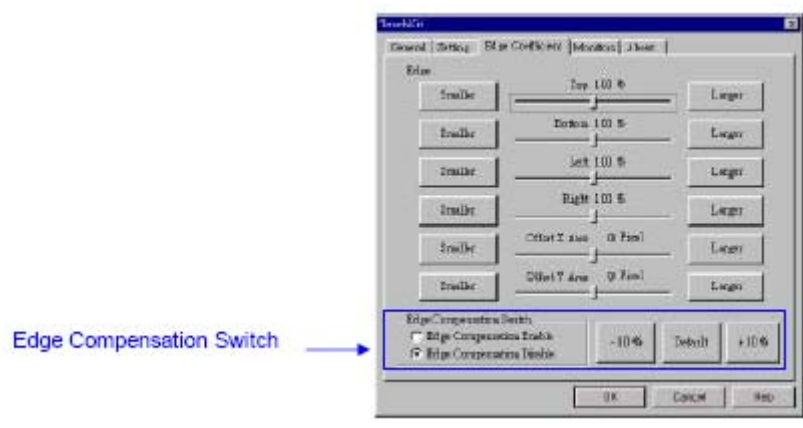

<Edge Compensation Switch>

Users can choose Edge compensation Enable / Disable from left bottom corner of Touchkit Utility.

Using +10% and -10% button to adjust the smaller or larger of edge. If users press +10% button, the top, bottom, left and right edges will extend 10% of orientation to touch screen, and cursor will be moved 10 pixel of X and Y Axis to right and top. If users press -10% button, the top, bottom, left and right edges will contract 10% of orientation to touch screen, and cursor will be moved 10 pixel of X and Y Axis to left and bottom.


If users want the value back to the default value, choose Default button.

Monitors

There are three functions in this property page, and they are Multiple Monitors, Split Monitor and One point Calibration. Such a trendy and yet innovated design provides viewing pleasures, viewing flexibility and convenience to users.

<Multiple Monitors>

To configure the mapping relationship between the monitors and the touch panels, select the monitor as below.

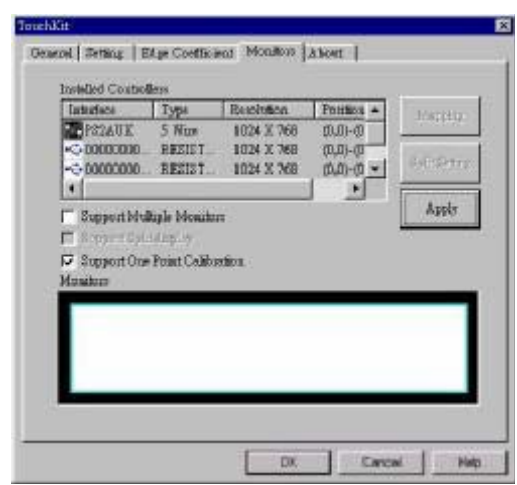

Set the check box (Use Multiple Monitors) to enable multiple monitors mapping.

Uncheck this box will disable multiple-monitor configuration, and all of the touch panel controllers will be mapped to the primary monitor. The gray shadow area is the monitor mapped the selected controller/panel. The button [Mapping] is used to find the mapping relationships between the monitors and touch panel controllers. Press the [Mapping], the software will guide users to touch the corresponding monitor to obtain the mapping relationship.



After finish monitor mapping, Press [Apply] to apply the mapping relation.

<Split Monitors>

To use the Split Monitor function, users need to select which controller you want to launch this function, then check the Multiple Monitors box and Split Monitor at the same time as showing as the follow picture. Press the [Split Setting] button to set up the activate area.




It shows the current resolution of display and users can set up the activate area by inputting the value by yourself or use the default button [Upper Half], [Left Half] or [Quarter]. The default value of panel resolution should be full screen as Left: 0 , Right: 0, Top: 0 and Bottom: 0.

<One Point Calibration>

TouchKit utility provides a fast tool to identify the touchscreen orientation when the monitor display was rotated by 90 degrees. Enable this One Point Calibration feature, Touchtray will pops up this One Point Calibration tool for users to identify and correct the touchscreen / monitor orientation whenever the monitors was rotated by 90 degrees. Disable this feature, Touchtray does not pop up this One Point Calibration tool. Then, the user has to do four points calibration to correct the orientation whenever the monitor was rotated.

About

Information about TouchKit.

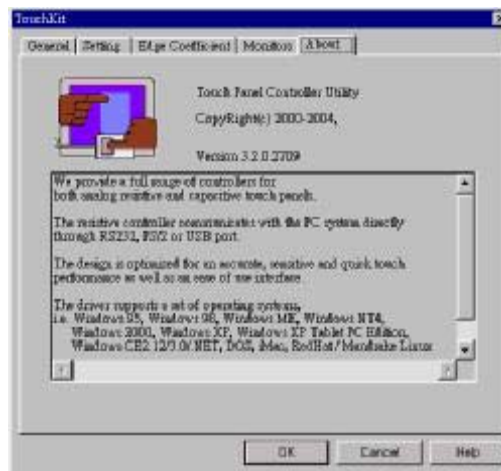


MONITOR ROTATION SETTING

TouchKit driver package for Windows 98/ME/2000/XP provides two easiest ways to rotate the touch panel while the display is rotated.

- Rotating display by way of nVidia or ATI driver
- Rotating display by way of Pivot.

4.1 Rotating display by way of nVidia or ATI driver

1. After activating the rotation of nVidia or ATI driver, there will be one blinking symbol show as the following picture. Touch near the blinking symbol until stop blinking, and the touch panel will rotate itself.

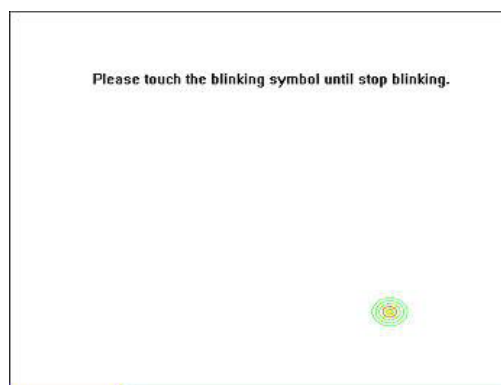

One touch blinking symbol adjustment

2. However, 180 degree rotation of touch panel can not be done in one step, users need to rotate 90 degree twice.

4.2 Rotating display by way of Pivot

There are two ways to rotate the display by way of Pivot.

- Rotating display by way of Pivot hotkey or function menu
- Rotating display by way of RotTray icon provided by TouchKit.

< Rotating display by way of Pivot hotkey or function menu >

1. To rotate the display, please install Pivot pro 6.05 first. Then reboot PC to activatePivot.

2. There will be a pivot icon in the task bar. Users can click on it, and users can choose four angles: 0 degree, 90 degree, 180 degree, 270 degree to rotate the

display.

3. After choosing the angle users want to rotate, there will be one blinking symbol showing as the following picture. Touch this blinking symbol until stop blinking, and the touch panel will rotate itself.



One touch blinking symbol adjustment

4. However 180 degree rotation of touch panel can not be done in one step, users need to rotate 90 degree twice.

< Rotating display by way of RotTray icon provided by TouchKit>

1. To rotate the display, please install Pivot pro 6.05 first. Then reboot PC to activate Pivot.

2. Users will see RotTray icon in the task bar.




RotTray icon

3. Clicking on RotTray, it will call Pivot to rotate the display and touch panel 90 degree at the same time. Clicking it again, it will rotate another 90 degree to 180 degree. Every click on RotTray, display will rotate clockwise. Recalibration and one symbol adjustment won't be necessary anymore.


4. However this version of RotTray is design for Pivot pro 6.05. If users want to use older version of Pivot, like Pivot 5.1, users need to amend the value of windows registry. The next step is an example for setting Pivot 5.1 on Win98.

5. Go to Start / Run, and execute regedit.

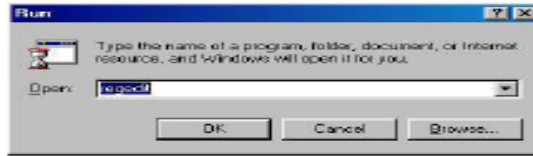


Press [OK] to execute

6. For Windows 95/98/ME OS, The Registry Editor will show as the follow picture. Then go to HKEY_LOCAL_MACHINE\System\CurrentControlSet\Services\VxD\TKIT. Right click on the MaxRotation, and choose Modify.

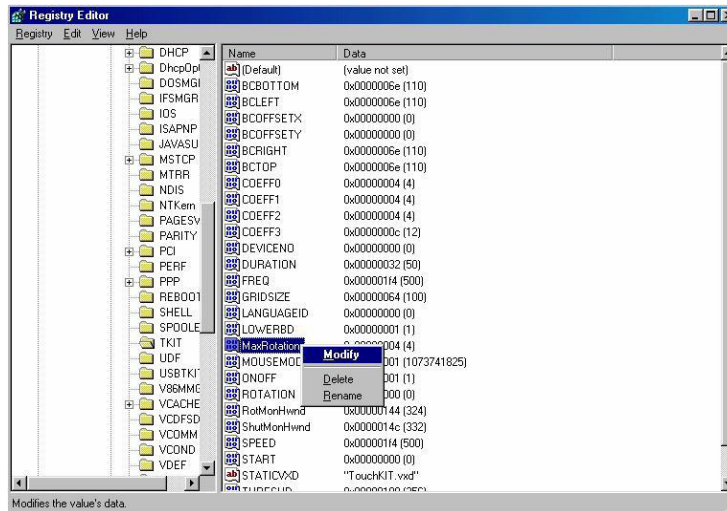

Right click on MaxRotation to Modify Value data

7. Choosing the Hexadecimal Base, and replace the value data “4”(default) with “FFFFFFFF”.

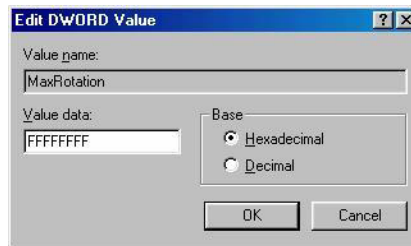


Pressing [OK] to confirm.

8. Here bellow are the value data for different version of Pivot:


Version of Pivot	Available Angle	Value Data
Pivot pro 6.05	0, 90, 180, 270	4 (default)
Pivot 5.1	0, -90	FFFFFFFF
Other Version	0, 90	2

Follow these steps to uninstall TouchKit.

1. Go to Start / Programs / TouchKit / Uninstall, and execute it.

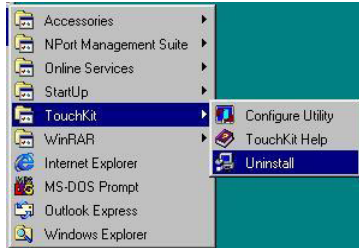


2. TouchKit setup dialog appears, and prepares to uninstall.

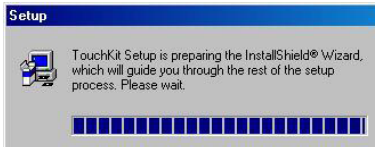

3. Confirm dialog, press [OK] to start un-installation; [Cancel] to cancel uninstallation.




4. Start to uninstall TouchKit.

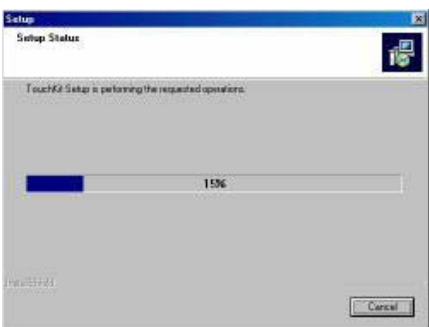


If users do not want to uninstall TouchKit at this moment, press [Cancel] to terminate the uninstall process.

5. TouchKit will not be removed until system re-boot. Press [Yes] to re-boot immediately or [No] to re-boot later.

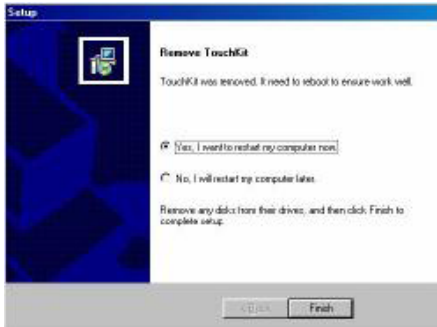

5.0 OSD OPERATIONS

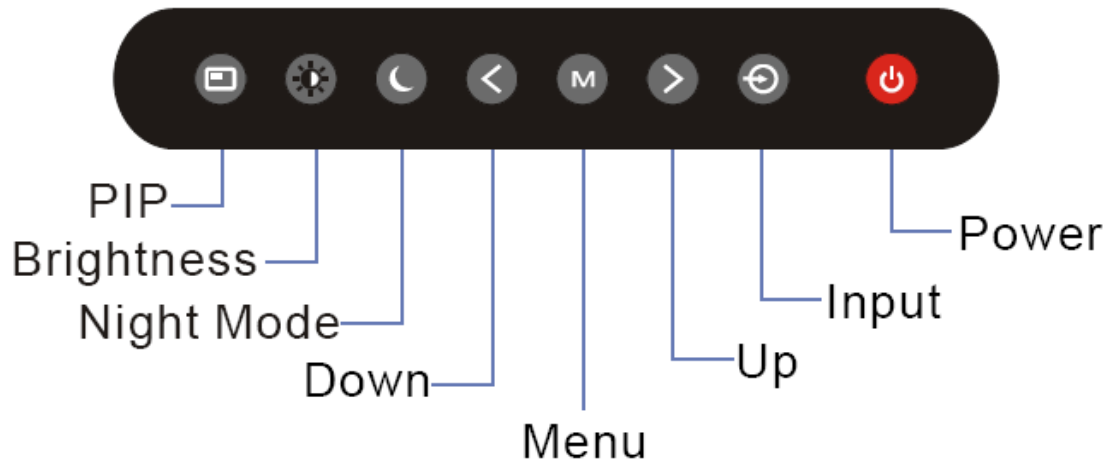

(Remarks: PIP function is only available for DMWX1150/51/52/53 & DMWX1200/01/02/03 model)

Introduction

Your Sunlight Viewable marine display can be controlled using the On Screen Display (OSD) menu and/or the 8 buttons on the front bezel of the unit. The OSD menu enables you to change the way in which your display is set up and is accessed using the Menu button.

Using the buttons

Each of the 8 buttons on the front bezel of your display has an input and a control function.

Input functions enable you to select the type of signal input to the display. Control functions enable you to change the appearance of the display.

Power

Power ON Key



To power your monitor ON, just need to press this button and it will delay the power on sequence around 3 seconds. This is Delta Components brand new design to well protect your Sunlight Viewable display damaged in the surge voltage from the engine.


Power OFF Key



To power your monitor OFF, just need to press this button and it will also delay the power off sequence around 3 seconds. Pressing the power button will display a list of what input for the main screen is associated with each button. This is just a reminder and is not part of the input selection process.

BRIGHTNESS Key

When you press the BRIGHTNESS Key, the screen will show the following image

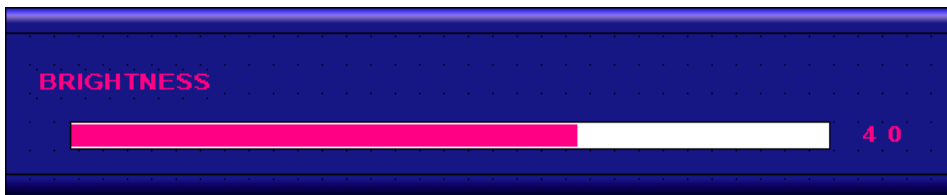

You can press the UP /DOWN Key to do the screen brightness adjustment. When the brightness achieve 50 and keeping pressing “UP” Key, the dimming will keep the brightness at 50. When you dimming down to brightness 1 and keeping pressing the “DOWN” Key, the dimming will keep the brightness at 1.

If you keep pressing “BRIGHTNESS” Key and hold it, the brightness will appear as following status:

. . . .2 → 1 → 2→ 3 → . . . → 48 → 49 → 50 → 49 → 48 →


And if you release the “BRIGHTNESS” Key around 5 seconds with any action, the brightness bar will disappear.

When you press “BRIGHTNESS” Key and other Key (not including Up/Down Key), the BRIGHTNESS status bar image will disappear.

When you press NIGHT MODE KEY or choose VR adjustment, the BRIGHTNESS KEY will be no function if you press it.

VR BRIGHTNESS Key

If you want to enable the VR Brightness function, you need to press “MENU” KEY and then choose VR function. When you rotate the VR knob, the VR BRIGHTNESS status bar will appear as below image (dimming range from 1~50):

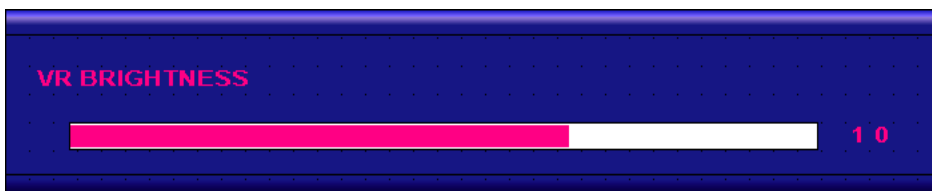

When you enter the VR BRIGHTNESS mode, it will be no function if you press the BRIGHTNESS KEY. And if you release the VR knob without any action around 5 seconds, the VR BRIGHTNESS Status bar image will be closed.

When you enter the “NIGHT MODE” or choose “BRIGHTNESS” Key for brightness adjustment, it will be no function if you control the VR knob.

When you press “MENU”, “DISP”, “PIP” Key, you will enter the menu item selection. And the VR BRIGHTNESS status bar image will be closed.

Any modified or changed parameter setting will be automatically saved if you power off or Exit the BRIGHTNESS status bar.

NIGHT MODE KEY

When you press the “NIGHT MODE” KEY, the dimming will be down to under 0.5 nit directly. And if you press “BRIGHTNESS” KEY or “VR” knob at this moment, it will be no function until you press the “NIGHT MODE” KEY again to release this restriction.

When you press “MENU”, “DISP”, “PIP” Key, you will enter the menu item selection.


Any modified or changed parameter setting will be automatically saved if you power off or Exit the NIGHT MODE.

UP / DOWN KEY

It works as menu item selection use, the “UP”KEY can be used as “RIGHT” KEY and the “DOWN” KEY can be used as “LEFT”KEY.

INPUT KEY

When you press “INPUT” KEY, the screen will pop up the following image:

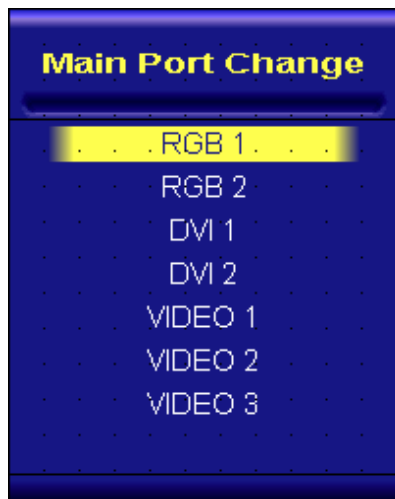

You can press the “UP”/ ”DOWN” KEY for the menu item selection above. It will remain at “VIDEO 3” position if you keep pressing “DOWN” KEY to the end. And it will also remain at “RGB1” position if you keep pressing “UP” KEY to the end.


When you press and hold the “INPUT” KEY, the menu screen will show as

RGB1→RGB2→ . . →VIDEO3→VIDEO2→ . .

If you release the “INPUT” KEY for 5 seconds without any action, the menu selection screen will be closed. And it will remain at the item which you’d selected.

When you press “MENU”, “BRIGHTNESS”, “PIP” Key, you will enter the menu item selection.

Any modified or changed parameter setting will be automatically saved if you power off or Exit the menu setting screen.

PIP KEY  (Remarks: PIP KEY is no available for DMWX1050-53 and DMWX1100-03 model)

1. Default main screen shows at RGB1 & RGB2→ Press “PIP” KEY→ Figure 1
2. Default main screen stays at DVI1 & DVI2→ Press “PIP” KEY→ Figure 2
3. Default main screen stays at VIDEO 1→ Press “PIP” KEY→ Figure 3_1
4. Default main screen stays at VIDEO 2→ Press “PIP” KEY→ Figure 3_2
5. Default main screen stays at VIDEO 3→ Press “PIP” KEY→ Figure 3_3

PIP Function Supporting Table								
Main \ Sub	RGB 1	RGB 2	DVI 1	DVI 2	VIDEO 1	VIDEO 2	VIDEO 3	
RGB 1			OK	OK	OK	OK	OK	Figure 1
RGB 2			OK	OK	OK	OK	OK	Figure 1
DVI 1	OK	OK			OK	OK	OK	Figure 2
DVI 2	OK	OK			OK	OK	OK	Figure 2
VIDEO 1	OK	OK	OK	OK		OK	OK	Figure 3_1
VIDEO 2	OK	OK	OK	OK	OK		OK	Figure 3_2
VIDEO 3	OK	OK	OK	OK	OK	OK		Figure 3_3

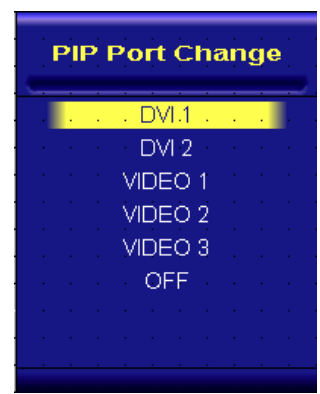


Figure 1

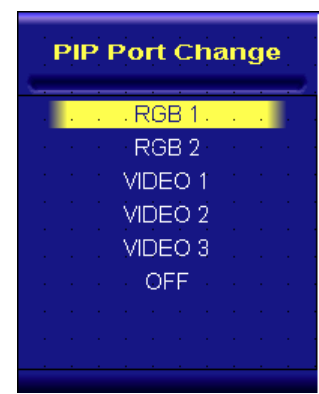


Figure 2

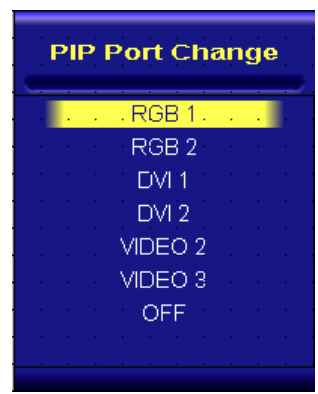


Figure 3_1

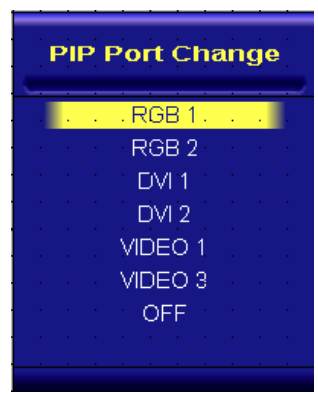


Figure 3_2

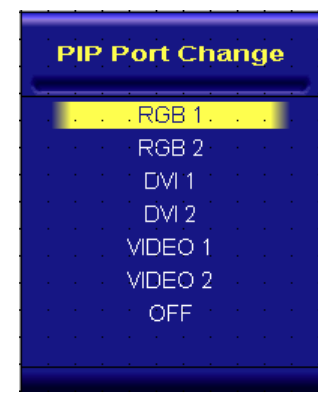


Figure 3_3

When you enter the “PIP Port Change” screen, the status bar will remain at “OFF” position if you keep pressing the “DOWN” KEY to the end. At the other hand, the status bar will remain at top item of each menu if you keep pressing the “UP” KEY to the end.

When you press and hold the “PIP” KEY, the menu screen will show as:

DVI→VIDEO1→VIDEO2→VIDEO3→OFF→VIDEO3→VIDEO2→VIDEO1→DVI→VIDEO1→...

If you release the “INPUT” KEY for 5 seconds without any action, the menu selection screen will be closed. And it will remain at the item which you’d selected.

When you press “MENU”, “BRIGHTNESS”, “PIP” Key, you will enter the menu item selection.

Any modified or changed parameter setting will be automatically saved if you power off or Exit the menu setting screen.

PIP KEY Function

You can choose PIP size scaling from 1~10 times and PAP1 (4:3 aspect ratio) or PAP2 (side by side for half full screen)

PIP (1~10) Picture


You can press “RIGHT/LEFT” key to move PIP window position

RIGHT KEY: the PIP window will move horizontally. You may put the PIP window to any desired horizontal position you want.


LEFT KEY: the PIP window will move vertically. You may put the PIP window to any desired vertical position you want.



PAP1 (4:3 aspect ratio window) Picture

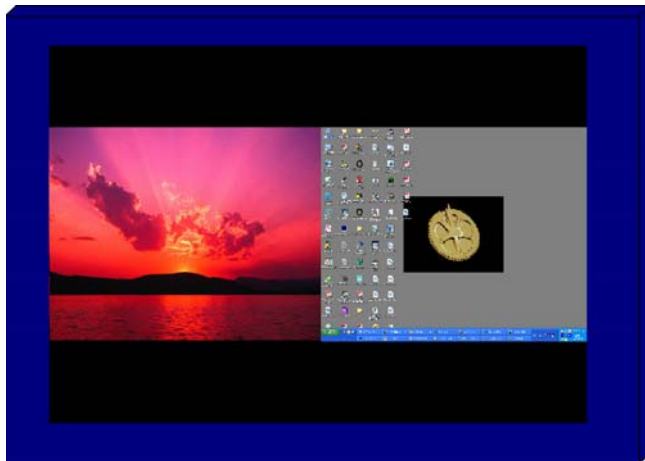

PAP2 (Side by side full screen window) Picture

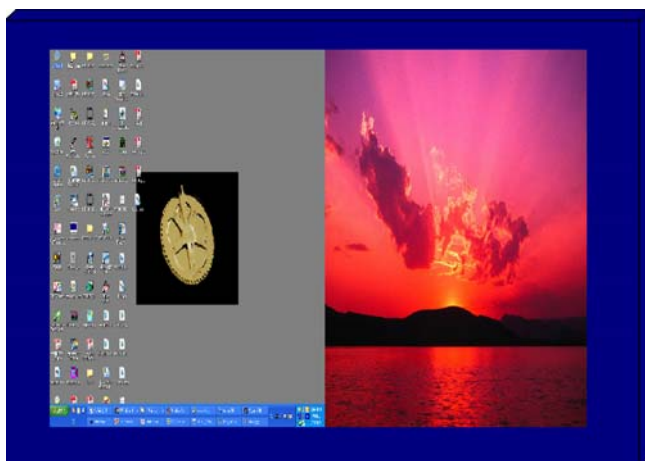

MENU KEY 

When you press “MENU” KEY, the OSD main menu screen will appear as below:



If you release the “MENU” KEY for 30 seconds without any action, the menu OSD screen will disappear automatically. You can also choose “QUIT” and then press “MENU” KEY to exit this OSD menu screen.

RGB1 & 2's setting screen: (Remarks: Only RGBx1 for DMWX1050-53 and DMWX1100-03 model)


	1280 x 1024	fH: 80.0 KHz / fV: 75 Hz	
RGB 1	PHASE	0	(1~64)
RGB 2	CONTRAST	0	(1~64)
	H_POSITION	0	(1~99)
DVI 1	V_POSITION	0	(1~40)
DVI 2	RED_GAIN	0	(1~64)
VIDEO 1	GREEN_GAIN	0	(1~64)
VIDEO 2	BLUE_GAIN	0	(1~64)
VIDEO 3	TEMPERATURE	5500K	(5500K/6500K/7000K/8000K)
	DISP_MODE	FULL	(FULL/EVEN/NORAML)
OSD	AUTO ADJUST	YES	
QUIT	EXIT		

RGB Setting Item Description:

- PHASE---- Horizontal Sampling Phase Adjustment ◦
- CONTRAST---- Contrast Adjustment ◦
- H_POSITION---- Horizontal Screen Adjustment ◦
- V_POSITION---- Vertical Screen Adjustment ◦
- R_LEVEL---- Red Color level Adjustment ◦
- G_LEVEL---- Green Color level Adjustment ◦
- B_LEVEL---- Blue Color level Adjustment ◦
- TEMPERATURE---- Color Temperature Adjustment ◦
- DISP MODE----
 - FULL---- Full Screen ◦
 - EVEN---- Half Screen ◦
 - NORMAL-- Keep normal aspect ratio ◦
- AUTO ADJUST---- Auto adjustment◦
- EXIT---- Quit from current setting◦
-

(Remarks: DISP MODE is not available for DMWX1050-53 and DMWX1100-03 model)

DVI 1 & 2's setting screen: (Remarks: Only DV1x1 for DMWX1050-53 and DMWX1100-03 model)

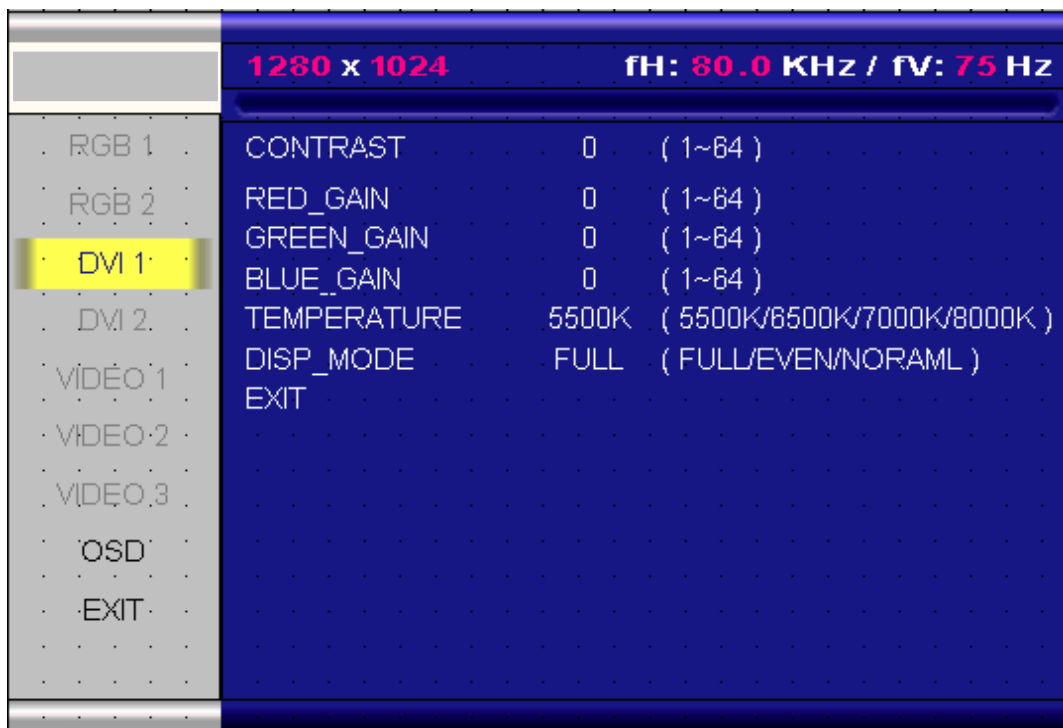


DVI Setting Item Description:

- CONTRAST——Contrast Adjustment ◦
- R_LEVEL—— Red Color level Adjustment ◦
- G_LEVEL—— Green Color level Adjustment ◦
- B_LEVEL—— Blue Color level Adjustment ◦
- TEMPERATURE—— Color Temperature Adjustment ◦
- DISP MODE——
 - FULL—— Full Screen ◦
 - EVEN—— Half Screen ◦
 - NORMAL—— Keep normal aspect ratio ◦
- EXIT—— Quit from current setting.

(Remarks: DISP MODE is not available for DMWX1050-53 and DMWX1100-03 model)

VIDEO 1 & 2 & 3' setting screen:

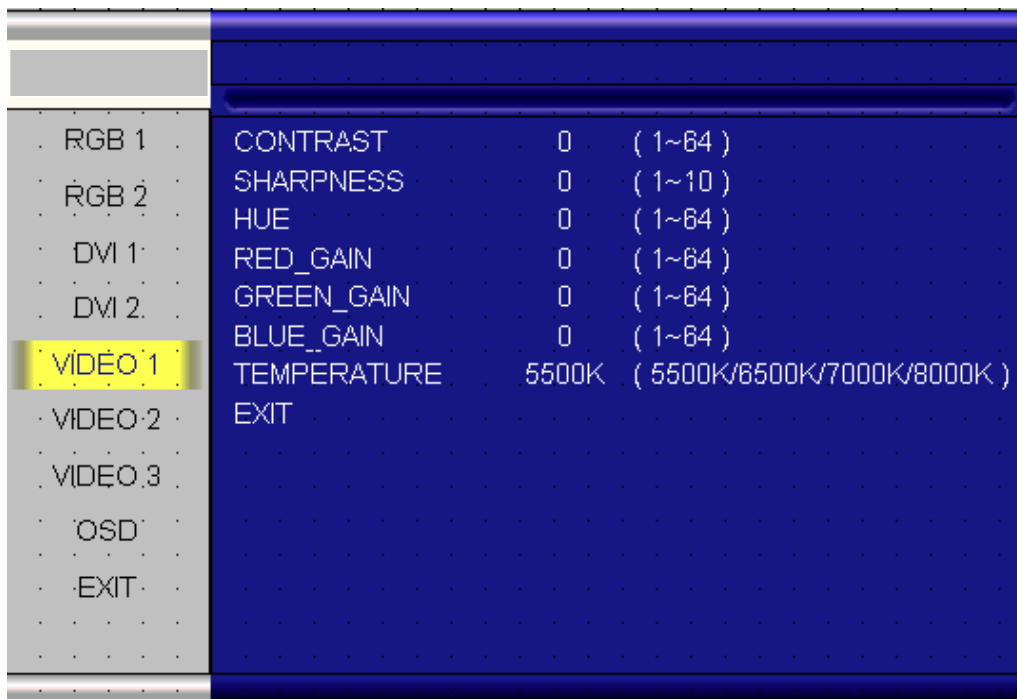


VIDEO Setting Item Description:

- CONTRAST—— Contrast Adjustment ◦
- SHARPNESS—— Horizontal edge sharpness
- HUE—— Color Adjustment
- R_LEVEL—— Red Color level Adjustment ◦
- G_LEVEL—— Green Color level Adjustment ◦
- B_LEVEL—— Blue Color level Adjustment ◦
- TEMPERATURE—— Color Temperature Adjustment ◦
- EXIT—— Quit from current setting。

(Remarks: HUE function is not available for DMWX1050-55 and DMWX1100-03 model)


PIP Sub-menu setting screen: (Remarks: PIP function is not available for DMWX1050-53 and DMWX1100-03 model)

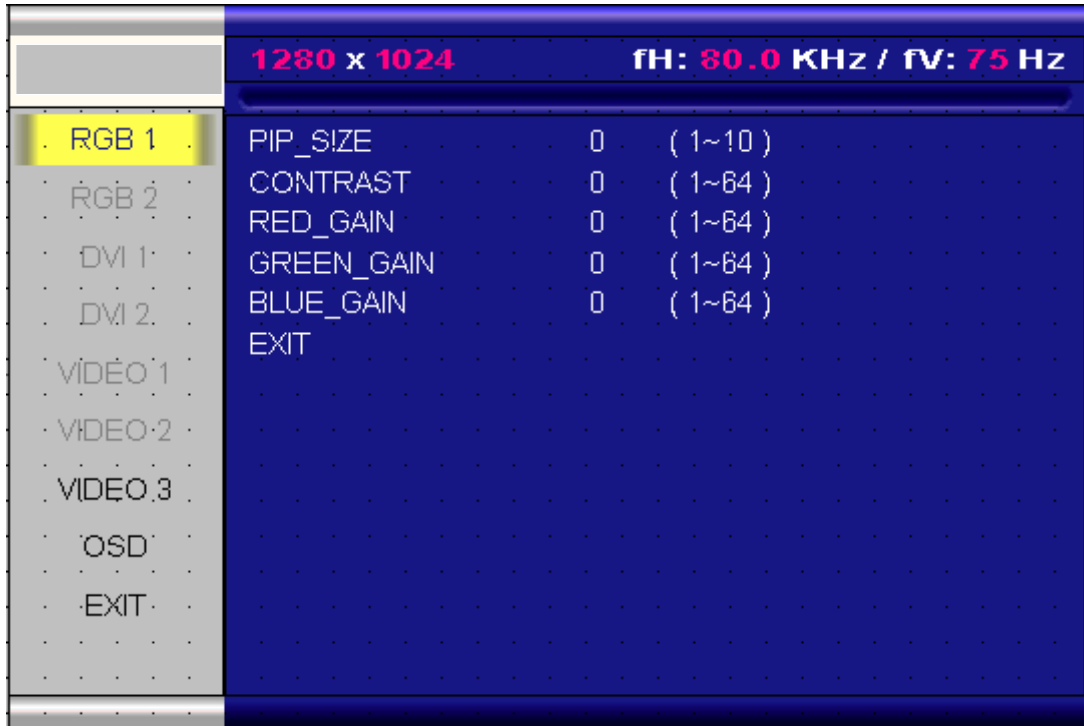

PIP Setting Item Description:

- PIP_SIZE—— Picture in Picture Screen Size Adjustment ◦
- CONTRAST—— Contrast Adjustment ◦
- R_LEVEL—— Red Color level Adjustment ◦
- G_LEVEL—— Green Color level Adjustment ◦
- B_LEVEL—— Blue Color level Adjustment ◦
- EXIT—— Quit from current setting◦

OSD Setting Main Screen:

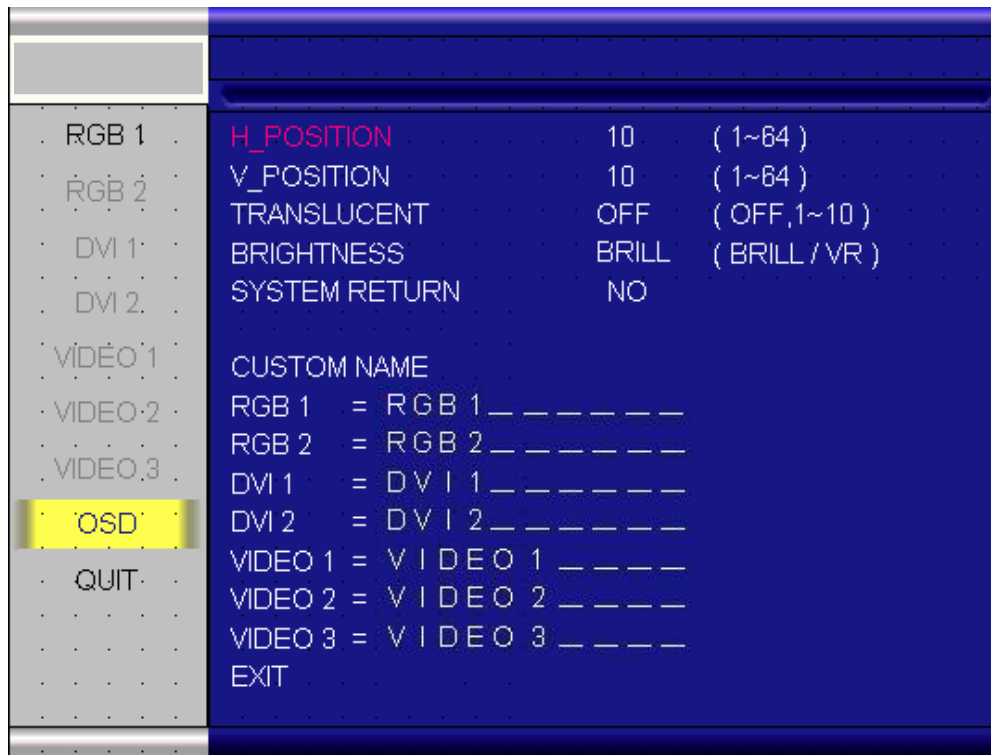

OSD Setting Item Description:

- H_POSITION— Horizontal Screen Adjustment ◦
- V_POSITION— Vertical Screen Adjustment ◦
- TRANSLUCENT— Screen background color can be adjusted as transparent as you want (total 10 scales) ◦
- BRIGHTNESS— Selection between “BRIGHTNESS” key or “VR” Button for brightness adjustment ◦
- SYSTEM RETURN— Restore all parameter setting to factory default value ◦
- EXIT— Quit from current setting.

(Remarks: TRANSLUCENT function is not available for DMWX1050-55 and DMWX1100-03 model)

Programmable OSD Source Tag setting screen:


1. Press the “RIGHT/LEFT” key to selected channel




2. Press the “MENU” key to rename the “RGB1” to any desired source input (ex. Sonar, Radar...etc). You may press “RIGHT/LEFT” key to select from (A-Z, 0-9, “.”, “-”) character. If done, just press “MENU” key to jump to next character for renaming step by step.




3. This is the picture of renaming RGB1 channel to “RADAR”

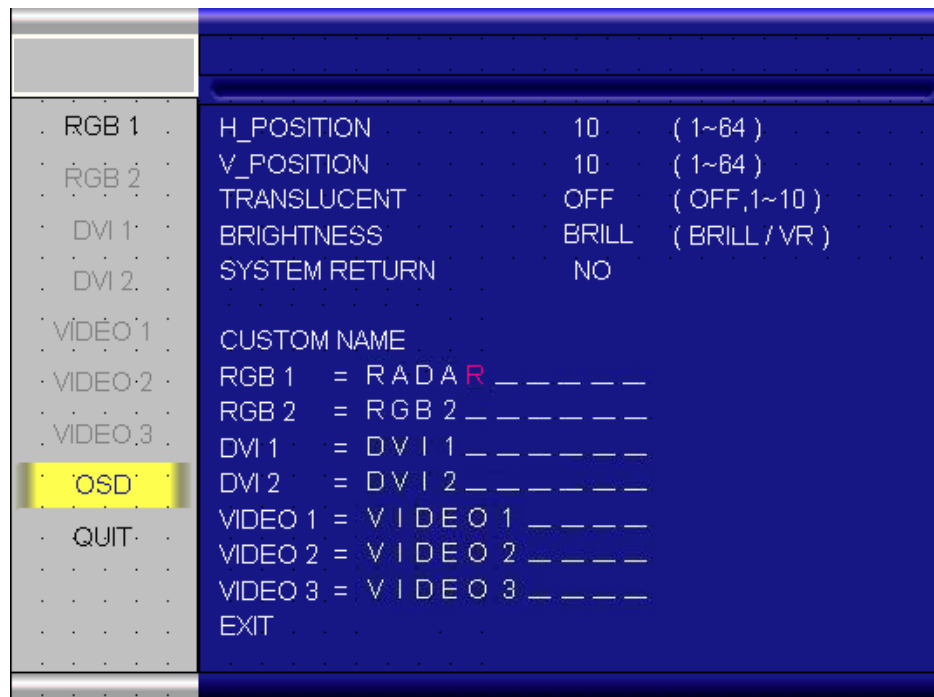

SYSTEM RETURN setting screen:

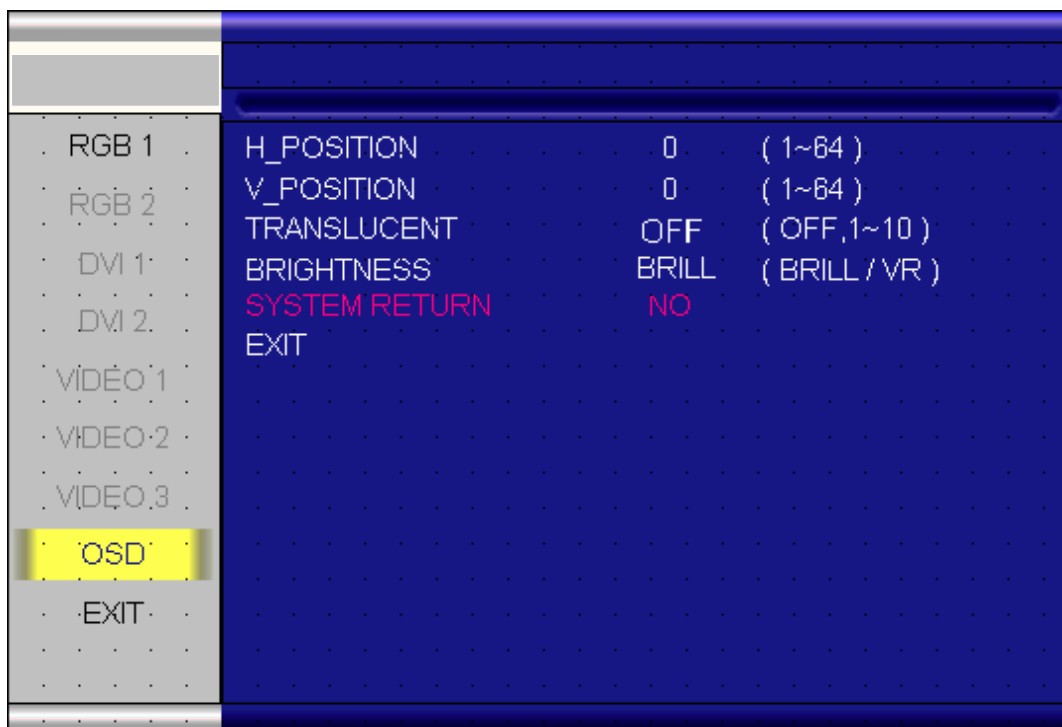

You may choose “SYSTEM RETURN” selection item on the OSD Screen to restore all of the parameter setting to factory default value. When you press “UP” or “RIGHT” KEY, the parameter will show “YES” and confirm it.

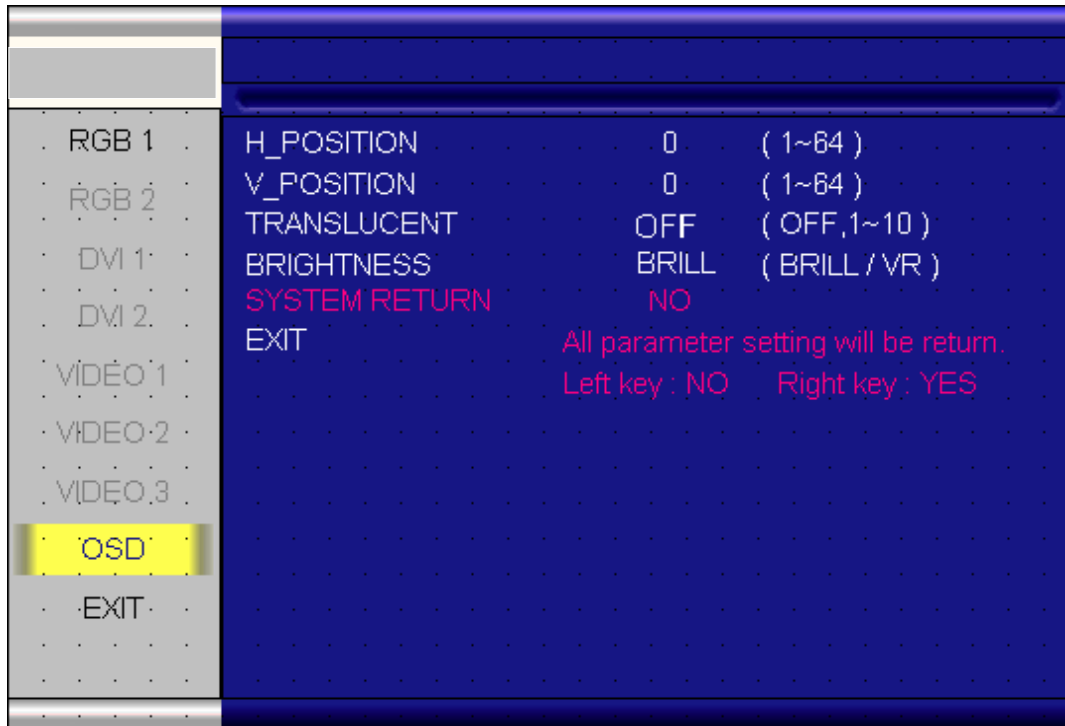

“KEY LOCK” Mode Function setting screen:

When you press “MENU” and “BRIGHTNESS” KEY simultaneously for 3 seconds, you will enter the “KEY LOCK” mode. At the same time, the screen will show “KEY LOCK” image as below for 5 seconds and then disappear.

In the “KEY LOCK” mode, it will be no function to press any key. When you press the key in the “KEY LOCK” mode, the screen will show “KEY LOCK” image as below for 5 seconds and then disappear.



To Release/Unlock “KEY LOCK” Mode Function setting screen:

In the “KEY LOCK” mode, when you press “MENU” and “BRIGHTNESS” KEY simultaneously for 3 seconds, you will release/unlock the “KEY LOCK” mode. At the same time, your screen will show “KEY UNLOCK” image as below.



6.0 TECHNICAL SPECIFICATION

6.1 Specification- DMWX1050-54

LCD Display

Backlight	12" LED Backlight
Active Display Area	245.76x184.32 mm
Brightness	1000 cd/m2 *
Resolution	1024x768 (XGA)
Contrast Ratio	800:1
Pixel Pitch (mm)	0.24(H)x0.24(V)
Viewing Angle	140 (H), 140(V)
Display Color	262,144
Response Time	Tr: 6ms, Tf: 17ms
Inputs	VGAX1, DVIx1, Composite x3, RS232x1

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	297.2(w)x256(H)x56(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	24W at 12V

Environmental

Operating Temperature	-20°C~60°C
Non-Operating Temperature	-20°C~70°C

Certification

Designed to meet FCC Class A,
Marine standard EN60945

* The brightness is measured under the 25°C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.2 Specification- DMWX1055

LCD Display

Backlight	12" LED Backlight
Active Display Area	245.76x184.32 mm
Brightness	1600 cd/m2 *
Resolution	1024x768 (XGA)
Contrast Ratio	700:1
Pixel Pitch (mm)	0.24(H)x0.24(V)
Viewing Angle	160 (H), 160(V)
Display Color	262,144
Response Time	35ms
Inputs	VGAX1, DVIx1, Composite x3, RS232x1

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	316(W)x272.3(H)x56(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	14W at 12V

Environmental

Operating Temperature	-20° C~60° C
Non-Operating Temperature	-20° C~70° C

Certification

Designed to meet FCC Class A,
Marine standard EN60945

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.3 Specification- DMWX1100-03

LCD Display

Backlight	15" LED Backlight
Active Display Area	304.128 x 228.096 mm
Brightness	1000 cd/m2 *
Resolution	1024x768 (XGA)
Contrast Ratio	700:1
Pixel Pitch (mm)	0.297(H) x 0.297 (V)
Viewing Angle	160 (H), 160(V)
Display Color	16.2M
Response Time	Tr:8ms, Tf:17ms
Inputs	VGAx1, DVIx1, Composite x3, RS232x1

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	352.8(W)x303.3(H)x56(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	40.8W at 12V

Environmental

Operating Temperature	-20° C~60° C
Non-Operating Temperature	-20° C~70° C

Certification

Designed to meet FCC Class A,
Marine standard EN60945

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.4 Specification- DMWX1104

LCD Display

Backlight	15" LED Backlight
Active Display Area	304.13 x 228.1 mm
Brightness	1600 cd/m2 *
Resolution	1024x768 (XGA)
Contrast Ratio	700:1
Pixel Pitch (mm)	0.297(H) x 0.297 (V)
Viewing Angle	160 (H), 160(V)
Display Color	16.7M
Response Time	8ms
Inputs	VGAx1, DVIx1, Composite x3, RS232x1

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	389.4(W) x 331(H) x 57.1(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	23W at 12V

Environmental

Operating Temperature	-20° C~60° C
Non-Operating Temperature	-20° C~70° C

Certification

Designed to meet FCC Class A,
Marine standard EN60945

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.5 Specification- DMWX1150-53

LCD Display

Backlight	17" LED Backlight
Active Display Area	337.92 x 270.336mm
Brightness	1000 cd/m2 *
Resolution	1280x1024 (SXGA)
Contrast Ratio	1000:1
Pixel Pitch (mm)	0.264 (H) x 0.264(V)
Viewing Angle	160 (H), 160(V)
Display Color	16.2M
Response Time	5ms
Inputs	VGAX2, DVIx2, Composite x3, RS232x1
Picture in Picture	3 stages

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	384(w)x348.1(H)x57.8(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	50.4W at 12V

Environmental

Operating Temperature	-10° C~50° C
Non-Operating Temperature	-20° C~70° C

Certification

Designed to meet FCC Class A,
Marine standard EN60945

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.6 Specification- DMWX1154

LCD Display

Backlight	17" LED Backlight
Active Display Area	337.9 x 270.3mm
Brightness	1600 cd/m2 *
Resolution	1280x1024 (SXGA)
Contrast Ratio	1000:1
Pixel Pitch (mm)	0.264 (H) x 0.264(V)
Viewing Angle	160 (H), 160(V)
Display Color	16.7M
Response Time	5ms
Inputs	VGAX2, DVIx2, Composite x3, RS232x1
Picture in Picture	3 stages

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	413.4(W) x 371.9(H) x 58.2(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	38W at 12V

Environmental

Operating Temperature	-10° C~50° C
Non-Operating Temperature	-20° C~70° C

Certification

Designed to meet FCC Class A,
Marine standard EN60945

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.7 Specification- DMWX1200-04

LCD Display

Backlight	19" LED Backlight
Active Display Area	376.32 x 301.06mm
Brightness	1000 cd/m2 *
Resolution	1280x1024 (SXGA)
Contrast Ratio	900:1
Pixel Pitch (mm)	0.294(H) x 0.294 (V)
Viewing Angle	160 (H), 160(V)
Display Color	16.2M
Response Time	5ms
Inputs	VGAX2, DVIx2, Composite x3, RS232x1
Picture in Picture	3 stages

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	421.9(w)x304.1(H)x56(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	55W at 12V

Environmental

Operating Temperature	-10° C~50° C
Non-Operating Temperature	-20° C~70° C

Certification

Designed to meet FCC Class A,
Marine standard EN60945

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.8 Specification- DMWX1205

LCD Display

Backlight	19" LED Backlight
Active Display Area	376.3 x 301.1mm
Brightness	1600 cd/m2 *
Resolution	1280x1024 (SXGA)
Contrast Ratio	1000:1
Pixel Pitch (mm)	0.294(H) x 0.294 (V)
Viewing Angle	160 (H), 160(V)
Display Color	16.7M
Response Time	5ms
Inputs	VGAX2, DVIx2, Composite x3, RS232x1
Picture in Picture	3 stages

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	463(W)x411.1(H)x56.9(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	42W at 12V

Environmental

Operating Temperature	-10° C~50° C
Non-Operating Temperature	-20° C~70° C

Certification

Designed to meet FCC Class A,
Marine standard EN60945

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.9 Specification- DMWX1250-53

LCD Display

Backlight	21.5" LED Backlight
Active Display Area	476.64 x 268.11mm
Brightness	1000 cd/m2 *
Resolution	1920x1080 (FHD)
Contrast Ratio	1000:1
Pixel Pitch (mm)	0.248(H) x 0.248 (V)
Viewing Angle	170 (H), 160(V)
Display Color	16.2M
Response Time	5ms
Inputs	VGAX2, DVIx2, Composite x3, RS232x1
Picture in Picture	3 stages

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	525.8(w)x345.2(H)x56.4(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	26W at 12V

Environmental

Operating Temperature	-10° C~50° C
Non-Operating Temperature	-20° C~70° C

Certification

Designed to meet FCC Class A,

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.10 Specification- DMWX1254

LCD Display

Backlight	21.5" LED Backlight
Active Display Area	476.64 x 268.11mm
Brightness	1600 cd/m2 *
Resolution	1920x1080 (FHD)
Contrast Ratio	1100:1
Pixel Pitch (mm)	0.248(H) x 0.248 (V)
Viewing Angle	170 (H), 160(V)
Display Color	16.7M
Response Time	5ms
Inputs	VGAX2, DVIx2, Composite x3, RS232x1
Picture in Picture	3 stages

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	557.6(W) x 383.2(H) x 56.9(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	47W at 12V

Environmental

Operating Temperature	-10° C~50° C
Non-Operating Temperature	-20° C~70° C

Certification

Designed to meet FCC Class A,

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.11 Specification- DMWX1302-05

LCD Display

Backlight	24" LED Backlight
Active Display Area	531.36 x 298.89mm
Brightness	1000 cd/m2 *
Resolution	1920x1080 (FHD)
Contrast Ratio	3000:1
Pixel Pitch (mm)	0.276(H) x 0.276(V)
Viewing Angle	178 (H), 178(V)
Display Color	16.7M
Response Time	25ms
Inputs	VGAX2, DVIx2, Composite x3, RS232x1
Picture in Picture	3 stages

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	584.2(w)x374.8(H)x57.7(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	50W at 12V

Environmental

Operating Temperature	-10° C~50° C
Non-Operating Temperature	-20° C~70° C

Certification

Designed to meet FCC Class A,

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.

6.12 Specification- DMWX1304-1

LCD Display

Backlight	24" LED Backlight
Active Display Area	531.36 x 298.89mm
Brightness	1000 cd/m2 *
Resolution	1920x1080 (FHD)
Contrast Ratio	3000:1
Pixel Pitch (mm)	0.276(H) x 0.276(V)
Viewing Angle	178 (H), 178(V)
Display Color	16.7M
Response Time	25ms
Inputs	VGAX2, DVIx2, Composite x3, RS232x1
Picture in Picture	3 stages

Mechanical

IP Rating	Facial waterproof to IP65 standards when console mounted.
Construction	Rugged Aluminum Alloy Chassis
Mounting	Panel (Flush) mount, VESA mount
Dimension	601.68(W)x423.3(H)x57.7(D)

Power

Voltage	Operates on 12V and 24V systems
Power Consumption	50W at 12V

Environmental


Operating Temperature	-10° C~50° C
Non-Operating Temperature	-20° C~70° C

Certification


Designed to meet FCC Class A,

* The brightness is measured under the 25° C ambient temperature before touch attached. Due to Panel material's deviation, different panel supplier will set different specific variance range to optical characteristics. The factors of time used, Lamp current, ambient temperature will influence the optical measurements.


6.6 ME Drawing- DMWX1100-04

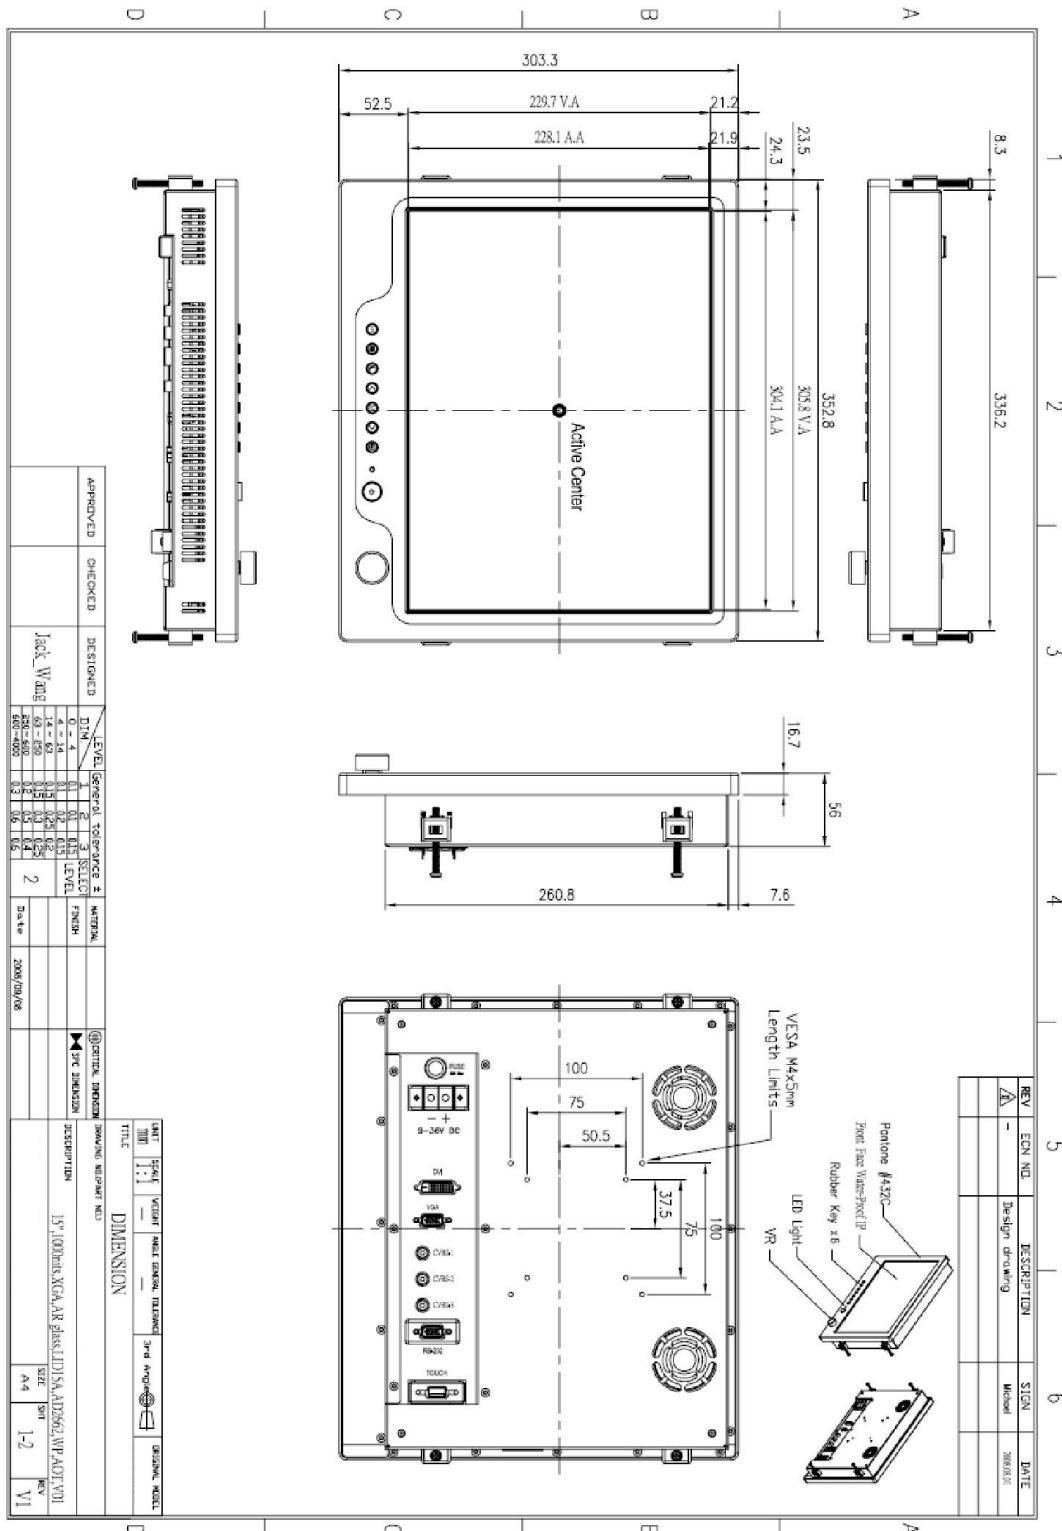


6.8 ME Drawing- DMWX1200-05

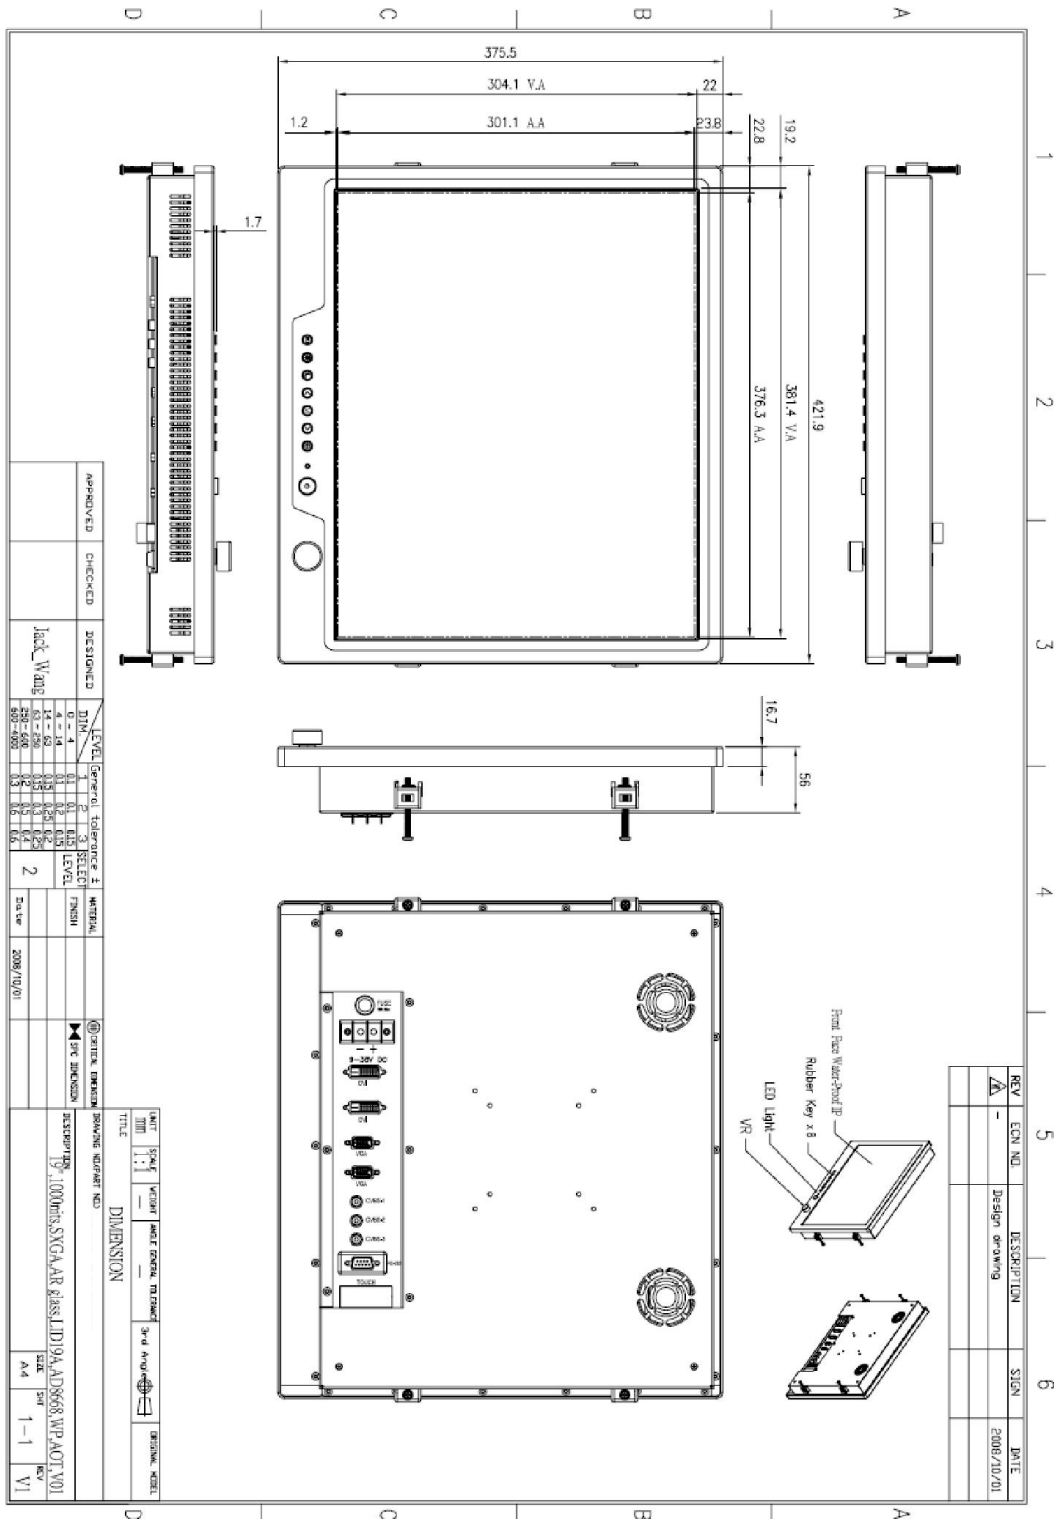

6.8 ME Drawing- DMWX1250-54

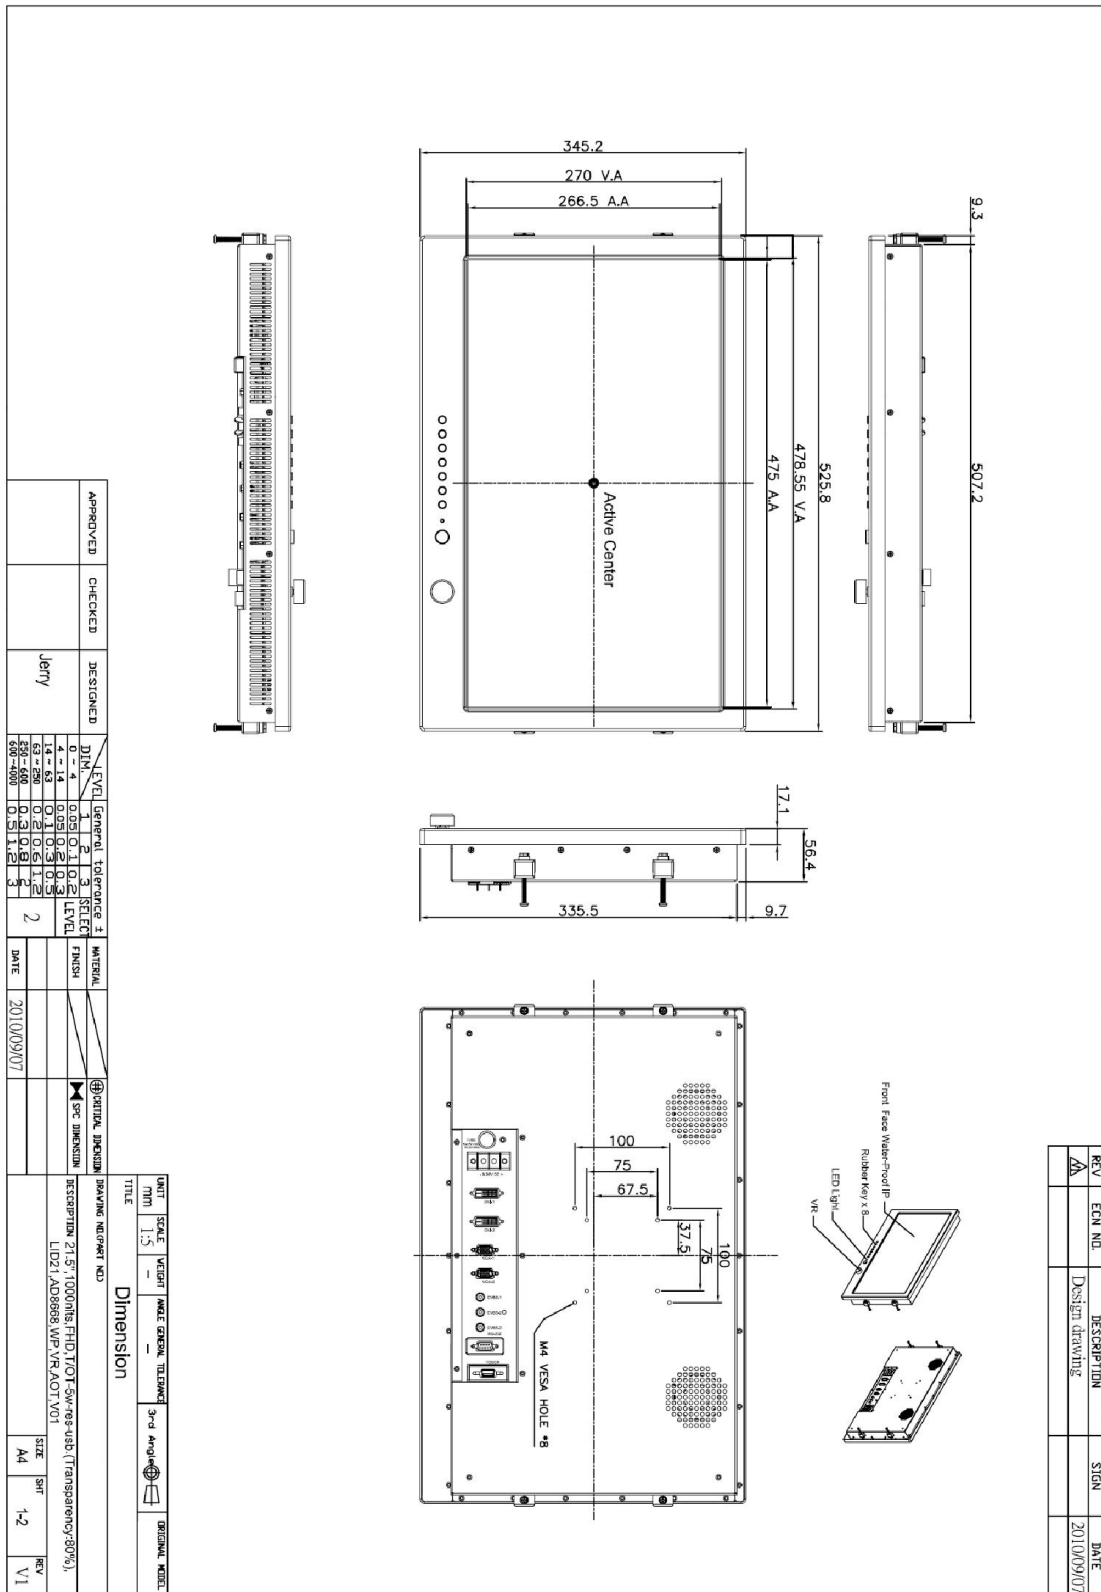

6.8 ME Drawing- DMWX1302-05

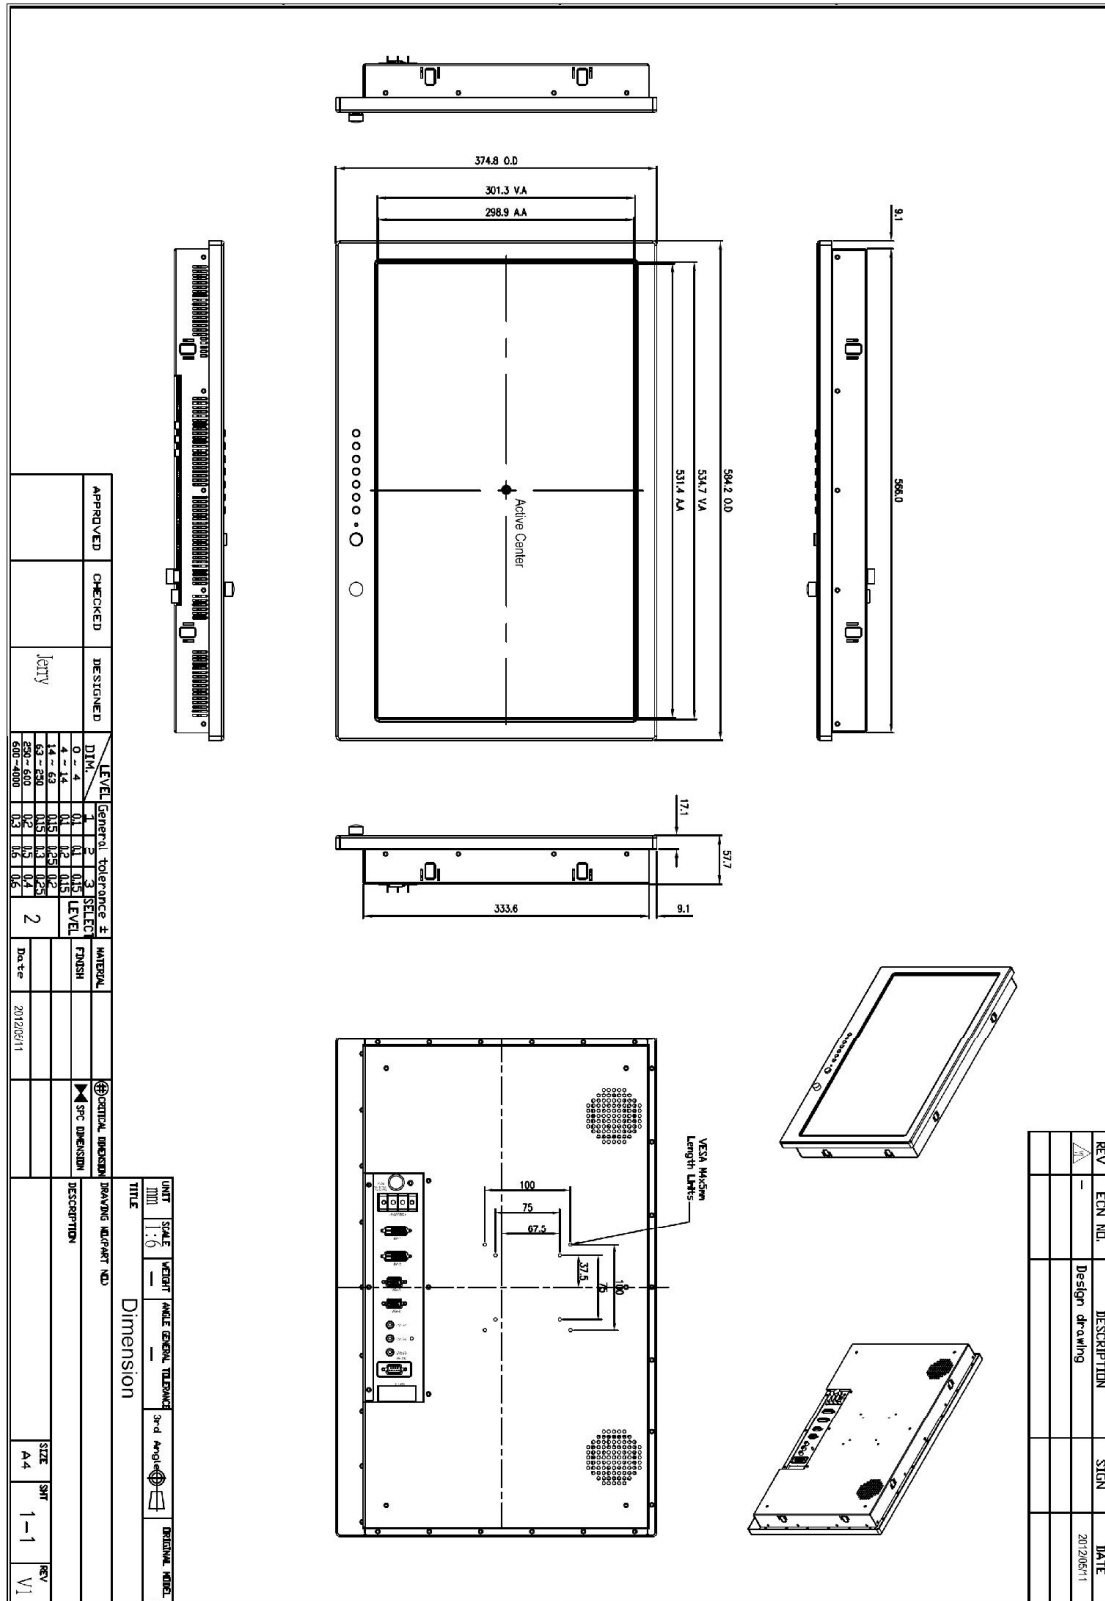

7.0 MAINTENANCE AND TROUBLESHOOTING

Precautions

To maximize the life and safe use of your unit, always be sure to follow the warnings, precautions and maintenance recommendations in this user's guide.

In a Watercraft or Vehicle:

- The monitor should be visible to the driver only if it is used for navigation, or system control. Care should be taken to ensure distraction does not occur.
- Review all applicable federal, state and local laws and regulations to make sure the monitor is used properly and safely.
- Avoid using the monitor for extended times while the charging system is not running, or the monitor could drain the watercraft's battery.

Maintenance



High Voltage

The display unit contains high voltages.

01. To reduce the risk of electric shock, do not remove the cover or back.

There are no user-serviceable parts inside.

02. Make sure you turn off and unplug the display before installing devices.

Cleaning the display



Cleaning

DO NOT use acid, ammonia based or abrasive products.

1. Use a soft cloth moistened with mild detergent, isopropyl alcohol, or window cleaners to clean the display housing.
2. Ensure the display is disconnected from the power supply. Wipe the display with a clean, damp cloth.
3. If necessary use iso-propyl alcohol (IPA) or a mild detergent to remove grease marks.
4. Never use abrasive cleaners, waxes or solvents to clean the unit.

Disconnecting the power supply

To disconnect the display from the boat's power supply either;

- Isolate the power cable from the main supply, or,
- Remove the power connector from the rear of the monitor.

The power button on the front of the monitor changes the operating mode; it does not provide complete protection in an emergency

Troubleshooting

All DELTA COMPONENTS products are, prior to packing and shipping, subjected to comprehensive test and quality assurance programs. However, if this unit should develop a fault, please refer to the following table to identify the most likely cause and the corrective action required to restore normal operation. If you still have a problem after referring to the table below, contact your local dealer, national distributor or Technical Services Department for further advice.

Common problems and their solutions

Problem	Solution
The display is very dim or dark	Adjust the display as described in "Image adjustment on" Section 5 OSD Menu.
The display shows the message 'No Input'	Check that the video source i.e. display, camera, DVD etc. is powered and that the cables are correctly connected.
You have pressed the power button, but the display does not function.	<ol style="list-style-type: none"> 1. Make sure that the power cable is well connected and that all connections are tight and free from corrosion. 2. Check the system fuse.